ANBAUANLEITUNG mounting instructions • instructions de montage • instrucciones de montaje • istruzioni di montaggio

KFT.06.799.65000/B

beinhaltet • contains • contient • contiene • contiene

KFT.06.799.30001/B KFT.00.152.36000 HSK.00.745.11000/B HSK.00.745.10000/B LOC.00.745.10200



Art.-Nr. / Item No.: KFT.06.799.30001/B

Revision: 00 Datum / Date: 04 - 2021

PRO side carriers

PRO Seitenträger

DEUTSCH - Vielen Dank, dass Sie sich für dieses Premium-Produkt von SW-MOTECH entschieden haben. Bitte besuchen Sie unseren Webshop für weitere Informationen wie Modellzuweisungen und PDF-Anbauanleitung. Erforderliche Dokumente (z. B. ABE) stehen als Download zur Verfügung.

Die Montage und/oder Wartung dieses Produkts erfordert ein gutes technisches Verständnis! Zu Ihrer eigenen Sicherheit empfiehlt SW-MOTECH, die Montage und/oder Wartung durch eine Fachwerkstatt durchführen zu lassen! SW-MOTECH übernimmt keine Haftung für Schäden, die durch eine unsachgemäße Montage und/oder Wartung verursacht wurden!

Beachten Sie alle in der Anbauanleitung angegebenen Hinweise und die für die Montage relevanten Informationen im Fahrzeughandbuch. Nichtbeachtung kann zu Schäden am Fahrzeug bzw. zur Gefährdung des Fahrers führen! Diese Anbauanleitung ist nach unserem derzeitigen Kenntnisstand verfasst worden. Rechtliche Ansprüche auf Richtigkeit bestehen nicht.

Dieses Produkt wurde für Fahrzeuge im Werkszustand entwickelt. Die Kompatibilität mit Original-Zubehörteilen bzw. den Zubehörteilen anderer Hersteller kann nicht gewährleistet werden. Stellen Sie des Weiteren VOR Montage dieses Produkts sicher, dass sich alle beweglichen Teile (z. B. die Kette) im ursprünglichen Wartungszustand befinden. Montiertes Zubehör kann das Fahrverhalten und/oder die Stabilität Ihres Fahrzeugs verändern.

ALLGEMEINE HINWEISE

Beachten Sie die landesspezifischen Vorschriften für Zulassung/Betrieb Ihres Fahrzeugs bzw. anwendbare TÜV-Vorschriften. Lassen Sie eintragungspflichtige Teile nach Montage durch Ihre Prüfstelle in die Fahrzeugpapiere eintragen.

VORBEREITUNG: Lesen Sie die Anbauanleitung aufmerksam und stellen Sie sicher, dass alle Teile der Stückliste vorhanden sind. Achten Sie darauf, dass Ihr Fahrzeug sicher steht und nicht umfallen kann. Schalten Sie den Motor ab und ziehen Sie den Zündschlüssel. Lassen Sie ggf. den Motor/Auspuff abkühlen. Klemmen Sie bei Arbeiten an der Elektrik die Fahrzeugbatterie ab. Verwenden Sie geeignetes Werkzeug. Lassen Sie sich von einer zweiten Person helfen.

MONTAGE: Alle vom Motorrad gelösten Teile und Verbindungen sind gemäß den Fahrzeugherstellerangaben wieder zu montieren oder durch die von SW-MOTECH gelieferten Teile zu ersetzen. Sichern Sie, falls nicht anderweitig definiert, alle Gewinde mit mittelfester, flüssiger Schraubensicherung. Alle nicht durch SW-MOTECH definierten Anzugsmoment-Vorgaben müssen beim Fahrzeughersteller oder einer Fachwerkstatt erfragt werden!

FUNKTIONSKONTROLLE: Stellen Sie nach der Montage sicher, dass alle zuvor gelösten Teile und Verbindungen wieder ordnungsgemäß montiert wurden. Achten Sie außerdem auf die uneingeschränkte Freigängigkeit und einwandfreie Funktion sämtlicher Fahrzeugteile. Kabel, Züge und Schläuche dürfen nicht scheuern und/oder geklemmt werden. Führen Sie vor Fahrtbeginn eine

scheuern und/oder geklemmt werden. Führen Sie vor Fahrtbeginn eine umfassende Funktionskontrolle durch. Überprüfen Sie nach den ersten 50 km und anschließend in regelmäßigen Abständen das Anzugsmoment aller Schraubverbindungen und den ordnungsgemäßen Sitz des Produkts.

PRODUKTSPEZIFISCHE HINWEISE

	Maximale Zuladung	Höchstgeschwindigkeit
0	12.5 KG (27.5 lbs) /Seite	() 130 km/h (80 mph)

ACHTUNG: Die angegebene maximale Zuladung beinhaltet das Gewicht von Koffer/Gepäck und Adapterkit! Es gilt die vom Fahrzeughersteller genannte, maximale Zuladung des Fahrzeugs!

Die Seitenträger wurden ausschließlich für die Verwendung von SW-MOTECH Adapterkits konzipiert.

Demontieren Sie die Seitenträger bei Fahrten ohne Gepäck. Verwenden Sie die Seitenträger immer paarweise.

ACHTUNG: Achten Sie darauf, dass sich die Koffer nach Montage am Fahrzeug nicht im Abgasstrom befinden! Verbrennungsgefahr!

ENGLISH - Thank you for choosing this premium product from SW-MOTECH. Please visit our webshop for additional information, such as application charts and PDF mounting instructions. Any other documents that may be required (e.g. ABE certifications), are also available for download at our webshop.

Installation and/or maintenance of this product require good technical understanding! For your own safety SW-MOTECH recommends having installation and/or servicing carried out by a specialist workshop! SW-MOTECH assumes no liability for damage caused by improper installation and/or maintenance work!

Carefully follow all the directions given in the mounting instructions and pay attention to all relevant information in the vehicle manual during assembly. Nonconformance can lead to vehicle damage or even endanger the driver! These mounting instructions are written based on our current state of knowledge. Legal requirements for accuracy do not exist.

This product was developed for vehicles in their factory setting. Compatibility with original accessory parts or other manufacturers' accessory parts is not guaranteed. Furthermore, BEFORE installing this product, make sure that all moving parts (e.g. the chain) are in the original state of maintenance. Installed accessories can change the driving behaviour and/or stability of your vehicle.

GENERAL INFORMATION

Observe the country-specific regulations concerning vehicle registration/ operation as well as TÜV regulations if applicable. If required, register installed parts in the vehicle documents through an appropriate inspection authority.

PREPARATION: Read the mounting instructions carefully and make sure that all items of the parts list are included. Make sure that your vehicle is parked safely and cannot fall over. Turn off the engine and remove the ignition key. Let the motor/exhaust cool off if necessary. Disconnect the vehicle battery when working on the electrical system. Use appropriate tools. Have another person to help you.

MOUNTING: All parts and connections removed from the vehicle must be reinstalled in accordance with the vehicle manufacturers' specifications or replaced by parts delivered by SW-MOTECH. Secure all threads, unless otherwise specified, with medium-strength liquid thread locker.

Torque specifications undefined by SW-MOTECH must be obtained from the vehicle manufacturer or by a specialist workshop!

FUNCTION CHECK: After installation make sure that all parts and connections previously removed are properly replaced. Also make sure that no moving parts are obstructed and no function of the vehicle is hindered in any way. Cables and hoses must not rub and/or be pinched. Before starting to ride, perform a comprehensive check of all functions. After the first 50 km and then at regular intervals, check the tightening torque of all screw connections and the proper fit of the product.

PRODUCT SPECIFIC INFORMATION

Maximum Load	Maximum Speed
12.5 KG (27.5 lbs) /side	(130 km/h (80 mph)

ATTENTION: The indicated maximum load is inclusive the weight of case/luggage and adapter kit! The maximum vehicle load specified by the manufacturer must not be exceeded!

The side carriers are designed exclusively for the use of SW-MOTECH adapter kits.

Dismount the side carriers when travelling without cases/luggage. Always use the side carriers in pairs.


ATTENTION: Make sure that after attaching the luggage to the vehicle it is not in the exhaust flow! Dangers of burns!



1

STÜCKLISTE / PARTS LIST

It NULL /99.001 Beterbigungdasche Munning lab 2.2 Iz Mot AS, DN 791 Send/ordpächnaube Constant of the Analysis	International Control Disk						
2 10. HF1L0.792.001 Beferigiungsjaache Muniting 1a h 2.22 10. M47 45 (5.01 M731 Senkloptichraube Constituy 7a h 4.4 10. M27 48 47 h 00 Distanziuches : chwarz Spearer, black 4.4 10. M27 49.202 L /R Befersigungsjaache, links / rechts Mounting 1a h, link / rechts 2.22 10. M27 48 47 h 00 Distanziuches : chwarz Spearer, black 4.4 10. M27 48 27 h 00 Unterlegischelie Washer 4.6 11. M6 104 64 22 k2 h 01 125 Unterlegischelie Washer 2.2 6 10. M3 45 (50 M 972 Innerschakantischruube Heagan Sackst Screw 2.2 2 10. M3 46 22 h 73.35 Distanzbuches Spearer 2.2 1 11. M6 (DN 64 22 h 73.53 Distanzbuches Spearer 2.2 1 11. M6 (DN 64 22 h 73.53 Distanzbuches Spearer 1.4 1 2.2 11. M4 (DN 6972 Multer mit Bund, selbstdicherrd) schwarz Lock Nu with Flangs, Black 2.2 1 11. M6 (DN 64 22 h 73.53 Distanzbuches Side Carris, Introd	2 10. H710x792.001 Extension Mounting 1a b 2.2 12 M4 x 45; D10 1791 Senskaptischen wirden version 4/4 13 M2 x 45; D10 1791 Distanziouten schwarz Spacer; black 4/4 14 MKT0x/797.002; J R Befestigung 3usche: Info/ fechio Mounting 1a b 2.7 15 M4 x 45; D10 172 Innerschladatschruube Heagon Sacket Screw 4/4 16 RF122.292.054 Durerwindreg neb Washer 2/7 16 10 R4 x 45; D10 172 Innerschladatschruube Heagon Sacket Screw 2/7 17 Innerschladatschruube Heagon Sacket Screw 2/7 6 10 R4 x 45; D10 172 Innerschladatschruube Heagon Sacket Screw 2/7 111 M6; D10 627 Unteringschladatschruube Specer 2/7 7 111 M6; D10 627 Mutter mit Bund; selbstichernd; schwarz Lack Nat with Flange; Black 2/7 111 M6; D10 797 Specer 2/7 1/1 1/2 112 K57: D6, 2	Schritt Nr.	Art -Nr. / Bezeichnung *	Artikel	Part	Anzahl **	N.m ***
12 M9 x 45, DN 7771 Seriekopic-traulue Gundersunk Screw 4.1 13 472 / 8 / 4 / h 40 Distanziuchen is schwarz Sporer, Max 4 4.4 14 M71.0 × 90.02 / R Befestigmadiache, Iniks / reiths Mining Tab, Ieh / right 2.7 15 M8 x 45, DN 912 Immenschiskantschraube Hoagan Socket Screw 4.4 16 6 4.2, DN 125 Unterlegischelbe Waher 4.4 17 KFT.22 892.004 Oiserverbinder Crossbar 1.1 18 6 4.2, DN 125 Immenschiskantschraube Hexagon Socket Screw 2.7 18 18 / a 64.2, DN 912 Immenschiskantschraube Waher 2.7 19 6 4.5, DN 921 Unterlegischebe Waher 2.7 10 18 / a 64.2, DA 25.5 Distanzbuches Sporer 2.7 10 18 / a 64.2, DA 27.5 Distanzbuches Sporer 2.7 113 Mo, DN 4927 Muter mit Bund, selbstachernd, schwarz Lock Nut With Flange, black 2.7 103 Systar0850114, KD 2 Schne	12 M9 x 65, DIN 7971 Senkkopic-brushe Gountersank Screw 4 /r 13 47 /r BM x 45, DIN 912 Enterlagganglache Inde /r reits Monting Tab, Ield / right 2 /r 15 M8 x 45, DIN 912 Enterlagganglache Inde /r reits Monting Tab, Ield / right 2 /r 16 d 6 4, DIN 912 Enterlagganglache Inde /r reits Monting Tab, Ield / right 4 /r 16 d 6 4, DIN 912 Enterlagganglache Inde /r reits Monting Tab, Ield / right 4 /r 17 KF122 892.004 Outerverbinder Crossbar 1 /r 18 Mo x 45, DIN 912 Inmenschlakanstehraube Hexagan Socket Screw 2 /r 19 Mo x 45, DIN 912 Inmenschlakanstehraube Washer 2 /r 10 3 f/r /r 8 /r 8, Z/h 75,5 Distindbuche Speer 2 /r 11 Mo, DIN 927 Mutter mit Bund, selbatischernd; schwarz Lock Nut with Flange: back 2 /r 13 System 97, DI /r 972.02 Seitentläger; links / rechs Side Carrier; left / right 2 /r 13 System 97, DI /r 972.02 Schweibverschluss mit Sicherungsschleib Quick Fastener with Lock Washer 9 /r 13 System 97, DI /r 972.02 Seitentläger; links /r alsh ift K 10 /r 918 1 /r 1 /r 13						
3) 0.22 / a. 8.4 / h. 40 Distanzbuches; schwarz Spacer; black 4/- 4) KFTL0,799.002, / R. Befestigungslasche; ink6 / rechts Mounting Tak left / right 2/- 5) M64 x50, N9 102 Unterligischelie Washer 4/- 6) #64, DN 125 Unterligischelie Washer 4/- 7) KFT 22, 292, 20/4 Gerverbinder Crossbar 1, ^ 8) M64 x52, DN 912 Interligischelie Washer 2/- 6 9) KFT 22, 292, 20/4 Gerverbinder Crossbar 1, ^ Interligischelie Washer 2/- 6 10) Stanzbuches Spacer; 2/- 6 Interligischelie Washer 2/- 6 110) Stanzbuches Spacer; Lock Nut with Flange; black 2/- 1 111 Mor, DN 972 Mutter mit Bund, selbstachernd; schwarz Lock Nut with Flange; black 2/- 1 112 KFL06,799,971.01 / 972.02 Salentrigger, ink6 / rechts Side Carrier, Inf1 / right 2/- 1 113 Systar95,501.LK.02 Schneliverschluss mit Sicherun	Image: Second						
Id KFT.06.799.002.L / R Betestigungslasche; links / rechts Mounting Tab; left / right 2.22 IS Mik x 45; DN 912 Innensechatantschraube Hexagon Socket Screw 4.2 IS IV // recent Schedule Washer 4.2 IS IV // recent Schedule Crossbar 1.1 IS IV // recent Schedule Washer 2.22 IS IV // recent Schedule Spacer 2.22 IS IV // recent Schedule Spacer 2.22 IS IV // recent Schedule Side Carrier, Ist // right 2.22 IS IV // recent Schedule IV // recent Schedule IV // recent Schedule IS Spacer IV // recent Schedule IV // recent Schedule IV // recent Schedule IS IV // recent Schedule I	Id KFT 06.799.002./R Befestigungdasche, links / rechts Mounting Tab, left / right 2/2 IS MB x 45; DN 912 Unterlegiche be Waher 4/4 IS MS x 25; DN 912 Unterlegiche be Waher 4/4 IS MS x 25; DN 912 Unterlegiche be Waher 4/4 IS MS x 25; DN 912 Unterlegiche be Waher 2/7 6 IS MS x 45; DN 912 Unterlegiche be Waaher 2/7 6 IS MS x 45; DN 912 Unterlegiche be Waaher 2/7 6 IS DI 8/1 6 2/1 / 25; Distanbuche Space 2/7 7 7 IS MS x 50 M 927 Muter mit Bund, setbatischernd; schwarz Lock Nu with Flange; black 7 7 IS Setbat Erde averbergin 97101 / 972.02 Setbat Erde averbergin with Lock Wagher 7 7 7 IS Stath FK 8.8 / Steel 0; 1.8 & MS MS 14 14 14 14 14 14 14 14 14 14						
IS M8 x 45; DIN 912 Innersechskantschraube Hexagin Socket Screw 4 /i IS e 34; DIN 125 Unstretegscheibe Washer 4 /i IS M8 x 45; DIN 912 Innersechskantschraube Hexagin Socket Screw 2 /i IS M8 x 45; DIN 912 Innersechskantschraube Hexagin Socket Screw 2 /i IS M8 x 45; DIN 912 Unstretegscheibe Washer 2 /i IS M8 x 45; DIN 912 Unstretegscheibe Washer 2 /i IS M8 x 45; DIN 912 Unstretegscheibe Spacer 2 /i IS M8 x 45; DIN 912 Unstretegscheibe Spacer 2 /i IS M8 x 45; DIN 912 Unstretegscheibe Spacer 2 /i IS M8 x 45; DIN 912 Site Carrier, Ioff / right 2 /i 2 /i IS Stort DR 501 LK02 Schentiterschluss m I Sicherungscheibe Duck Fastener with Lock Washer 8 /i IS Stort PK 86 / Stort CL B & Nm 2 // 8 / 5 / 7 / 2 / 2 / 2 / 2 / 2 / 2 / 2 / 2 / 2	IS M8 x 45, DIV 912 Innersech-skantschraube Hexagon Socket Screw 4 /c IS Underlegscheite Washer 4 /c IS IS M8 x 45, DIV 912 Innersech-skantschraube Hexagon Socket Screw 2 /c IS IS KF.122.892.004 Ourerrebinder Crossbar 1 /c IS M8 x 45, DIV 912 Innersech-skantschraube Hexagon Socket Screw 2 /c 6 IS M8 x 45, DIV 912 Underlegschole Washer 2 /c 6 IS M8 x 45, DIV 912 Underlegschole Washer 2 /c 7 IS M8 x 45, DIV 912 Underlegschole Washer 2 /c 7 IS M8 x 45, DIV 912 Underlegschole Washer 2 /c 7 IS M8 x 45, DIV 912 Underlegschole Washer 8 /c 7 IS M8 x 45, DIV 912 Underlegschole Washer 8 /c 7 IS M8 x 45, DIV 912 M8 x 45, DIV 912 Innersechalse Schowarz Lock Mu with Flange Schowa					-	
64 a 6,4; DIN 125 Unterlegischeiße Washer 4,4 7 IV, KFT 22.2822.004 Duerverbinder Crossbar 1,4 18 M6 x 45; DIN 912 Internechskartschraube Hexagon Socket Screw 2,72 101 B13/ 542; DIN 922 Unterlegischeiße Washer 2,72 101 B13/ 542; DIN 8021 Unterlegischeiße Washer 2,72 111 M6, UIN 927 Mutter mit Bund, seldstischernd, schwarz Lock Nut with Flange, black 2,72 112 KFT 06, 799, 971, D1 / 972, 02 Seitenträger, Unks / rechts Side Carrier; left / right 2,72 113 SVST.095.001, LK 02 Seitenträger, Unks / rechts Guck Fastener with Lock Washer 6,6 113 SVST.095.001, LK 02 Seitenträger, Unks / rechts Duck Fastener with Lock Washer 7 114 Lock NB 8/ Steel CL 08 Nm 48 M5 M2 102 Registrowind / Course Tirread 8 M4 M5 M4 M4 M5 M2 114 Steel CR 88 / Steel CL 08 Nm 48 M5 M5 M2 M2 102 Steel CR 10,00 M1 103 104 M	Idia a 6.4; DIN 125 Unterlegischebe Wisher 4 /4 Image: Construction of the c						
3 17 KT.2.2.92.2.004 Quererbinder Crossbar 1/1 18 Ms.x.45; DN 912 Innensechskantschraube Hasagon Socket Screw 2/2 6 19 s.4, DN 921 Unterragscheite Waher 2/2 6 101 9.197.9.4.27.0.25 Distanzbuchse Spacer 2/2 7 111 Ms. DN 927 Muter mit Bund, selbstichernd; schwarz Lock Nutwith Flange; black 2/2 7 12 KKT.06.799.971.01.7 972.02 Seltenträger, Unks / rechts Side Carrier; left / right 2/2 13 SVS1.095.501.LK.02 Schenzingscheite Ouck Fastener with Lock Washer 8/9 13 SVS1.095.501.LK.02 Schenzingscheite Ouck Fastener with Lock Washer 8/9 14 Statt FK 08.7 fore: CLB mease Md MS Md Md Md Md Md 15 Statt FK 08.7 fore: CLB mease Md MS Md M	3 17 KT2.282.2004 Querrerhinder Crossbar 1 1 1 18 M & x45. DN 912 Unterlegscheibe Washer 2.7 2 1 19 a 6.4, DN 9021 Unterlegscheibe Washer 2.7 1<					-	
(a) Máx 45; DIN 912 Innensechakantschraube Hexagon Sacket Screw 2.7: 6 (b) # 64; DIN 921 Unterlogscheibe Washer 2.7: 1 (c) 18/ a 6; 2/ h 25; 3 Distanzbuchse Spacer 2.7: 1 (c) 18/ a 6; 2/ h 25; 3 Distanzbuchse Spacer 2.7: 1 (c) 111 M6; DIN 6927 Muter mit Bund, selbstöchernd; schwarz Lock Nur with Flange; Black 2.7: (c) 112 KF1.06.799.971.01 / 972.02 Seitenträger; links / rechts Side Carrier; left / right 2.7: (c) 13 SVST.095.501.LK.02 Schnellverschluss mit Scherungsscheibe Ourick Fastener with Lock Washer 8.7: 8.0 Regelgewinde / Coarse Thread 5 M4 M5 M6 M8 M10 M12	(a) Mé x 45; DIN 912 Innensechskantschraube Hexagon Socket Screw 2,1 6 (b) # 64,0 DN 9021 Unterlegscheibe Washer 2,1 7 (c) # 64,0 DN 9021 Unterlegscheibe Spacer 2,1 7 (c) # 7,0 DN 9021 Unterlegscheibe Spacer 2,1 7 (c) # 7,0 DN 9021 Muter mit Bund, selbstichernd; schwarz Lock Nur with Flange; black 2,7 7 (c) # 7,0 DN 9021 Seitenträger; links / rechts Side Carrier; left / right 2,7 7 (c) # 7,0 DN 9021 Schnellverschluss mit Sicherungsscheibe Ouck Fastener with Lock Washer 8,0 Fastener with Lock Washer 8,0 (c) # 7,0 DN 9021 Execution of the set of the	(0)	Ø 0,4; DIN 125	Ontertegscheibe	Washer	4 / 4	
(a) Máx 45; DIN 912 Innensechakantschraube Hexagon Sacket Screw 2.7: 6 (b) # 64; DIN 921 Unterlogscheibe Washer 2.7: 1 (c) 18/ a 6; 2/ h 25; 3 Distanzbuchse Spacer 2.7: 1 (c) 18/ a 6; 2/ h 25; 3 Distanzbuchse Spacer 2.7: 1 (c) 111 M6; DIN 6927 Muter mit Bund, selbstöchernd; schwarz Lock Nur with Flange; Black 2.7: (c) 112 KF1.06.799.971.01 / 972.02 Seitenträger; links / rechts Side Carrier; left / right 2.7: (c) 13 SVST.095.501.LK.02 Schnellverschluss mit Scherungsscheibe Ourick Fastener with Lock Washer 8.7: 8.0 Regelgewinde / Coarse Thread 5 M4 M5 M6 M8 M10 M12	(a) Mé x 45; DIN 912 Innensechskantschraube Hexagon Socket Screw 2,1 6 (b) # 64,0 DN 9021 Unterlegscheibe Washer 2,1 7 (c) # 64,0 DN 9021 Unterlegscheibe Spacer 2,1 7 (c) # 7,0 DN 9021 Unterlegscheibe Spacer 2,1 7 (c) # 7,0 DN 9021 Muter mit Bund, selbstichernd; schwarz Lock Nur with Flange; black 2,7 7 (c) # 7,0 DN 9021 Seitenträger; links / rechts Side Carrier; left / right 2,7 7 (c) # 7,0 DN 9021 Schnellverschluss mit Sicherungsscheibe Ouck Fastener with Lock Washer 8,0 Fastener with Lock Washer 8,0 (c) # 7,0 DN 9021 Execution of the set of the	2 (7)	KET 22 802 00/	Querverbinder	Creechar	1.0	
(9) a 6.4; DIN 9021 Unterlagscheibe Washer 2.7 (10) B 18/r 6.2/1 25.5 Distanzbuchse Spacer 2.7 (11) Mr: DIN 6927 Mutter mit Bund, selbstsichernd; schwarz Lock Nur with Flange; black 2.7 (12) KF106.799.971.01 / 972.02 Settenträger; tinks / rechts Side Carrier; telf / right 2.2 (13) Sk/ST.0795.501.LK.02 Schnetlverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8.8 (13) Sk/ST.0795.501.LK.02 Schnetlverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8.8 (13) Sk/ST.0795.501.LK.02 Schnetlverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8.8 (14) MS BM MM MM MS MM MM M12 D.9 Regeligewinde/ Coarse Thread B M4 MM M4 M12 10.9 (15) Stahl FK R8 / Steel CLas N Nm / 28 Stahl FK R8 / Steel CLas N Nm / 28 Stahl FK R8 / Steel CLas N Nm / 24 8.7 1 (16) Stahl FK R8 / Steel CLas N Nm / 28 Stahl FK R8 / Steel CLas N Nm / 24 8.7 1 24 7 (16) Stahl FK R8 / Steel CLas N Nm / 24 Stahl FK R8 / Steel CLas N Nm / 24 8.7 1 24 7 (16) Stahl FK R8 / Steel CLas N Nm / 24 Stahl FK R8 / Steel CLas N Nm / 24 8.7	(9) 8 6.4; DIN 9021 Unterlegscheibe Washer 2 // (10) B 18 / a 6.2 / h 25.5 Distanzbuchse Spacer 2 // (11) Md; DIN 9727 Mutter mit Bund, selbsteichernd; schwarz Lack Nut with Flange; black 2 // (12) KFT 06.799, 971.01 / 972.02 Schenträger, links / rechts Side Carrier, left / right 2 // (13) SV 5T, 095.301 LK 02 Schentiverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 /e (13) SV 5T, 095.301 LK 02 Schentiverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 /e (13) SV 5T, 095.301 LK 02 Schentiverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 /e (13) SV 5T, 095.301 LK 02 Schentiverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 /e (14) Staft FK 88 / Steel CL 68 Nm 128.5 6 /g 23 6 /g 7 10.0 Regeligewinde / Coarse Thread 8 /H /g /H /g /H /g //g /e 7 Mitter Mitte						/
100 0 18 / e 6,2 / h 25,5 Distanzbuchse Spacer 2 / ? 111 Mc UN 6527 Mutter mit Bund, selbstsichernd; schwarz Lock Nut with Flange, black 2 / ? 111 Mc UN 6527 Mutter mit Bund, selbstsichernd; schwarz Lock Nut with Flange, black 2 / ? 111 Mc UN 6527 Mutter mit Bund, selbstsichernd; schwarz Lock Nut with Flange, black 2 / ? 112 KF106.799.71.01 / 972.02 Seitenträger, links / rechts Side Carrier, left / right 2 / ? 113 SV.51.095.501.LK.02 Schnellverschluss mit Sicherungsscheibe Duick Fastener with Lock Washer 8 / / 8.8 Regelgewinde / Coarse Thread Ø M4 M5 M6 M8 M10 M12 Stahl FK 38/Steel CLE 8 Hm 2.8 5.5 9.6 42 42 7 1 *** detabageshängender of the kernerweide winde wi	100 0 18 / e 6,2 / h 25,5 Distanzbuchse Spacer 2 // 111 Mc JDN 6927 Mutter mit Bund, selbstsichernd; schwarz Lock Nut with Flange; black 2 // 111 Mc JDN 6927 Mutter mit Bund, selbstsichernd; schwarz Lock Nut with Flange; black 2 // 111 Mc JDN 6927 Mutter mit Bund, selbstsichernd; schwarz Lock Nut with Flange; black 2 // 112 KFT 06.799.971.01 / 972.02 Seitenträger; links / rechts Side Carrier; lell / right 2 // 113 SV.ST.095.501.LK 02 Schnellverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 // 113 SV.ST.095.501.LK 02 Schnellverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 // 113 Stahl FK 0.6 // Steel CL 0.8 Nm 2.8 55 // 2 // 10 // 124 Md M5 Md M10 M12 10 // 2 // 124 Md M10 M12 2 // 2 // 10 // 2 // 124 Md M10 M10 M10 M10 <t< td=""><td></td><td></td><td></td><td></td><td>-</td><td>0</td></t<>					-	0
111 Mc, DIN 6927 Mutter mit Bund, selbstsichernd, schwarz Lock Nut with Flange; black 2,7 112 KFT.06.799.971.01 / 972.02 Seitenträger; links / rechts Side Carrier; left / right 2,2 113 SVST.095.01.LK.02 Schnellverschluss mit Sicherungsscheibe Duick Fastener with Lock Washer 8 n 113 SVST.095.01.LK.02 Schnellverschluss mit Sicherungsscheibe Duick Fastener with Lock Washer 9 n 113 SVST.095.01.LK.02 Schnellverschluss mit Sicherungsscheibe Duick Fastener with Lock Washer 9 n 114 Mc 2015 Statt FK 08.9 Stott CLS.08 MR 2015 7 n 114 Mc 2015 Statt FK 0.8 / Stott CLS.08 MR 2015 7 n 114 Mc 2015 Statt FK 0.8 / Stott CLS.08 MR 2015 7 n 114 Mc 2015 Statt FK 0.8 / Stott CLS.08 MR 2015 7 n 115 Statt FK 0.8 / Stott CLS.08 MR 2015 7 n 1 n	111 M6; DIN 6927 Mutter mit Bund, selbstsicher nd, schwarz Lack Nut with Flange, black 2./. 112 KFT.06.799.971.01 / 972.02 Seltenträger, links / rechts Side Carrier, left / right 2./. 113 SVST.095.501.LK.02 SchnetUverschuss mit Sicherungsscheibe Quick Fastener with Lack Washer 9.0. 113 SVST.095.501.LK.02 SchnetUverschuss mit Sicherungsscheibe Quick Fastener with Lack Washer 9.0. 113 SVST.095.501.LK.02 SchnetUverschuss mit Sicherungsscheibe Quick Fastener with Lack Washer 9.0. 114 A.8. M2 M5 M6 M8 M10 M12 119 SVST.095.501.LK.02 SchnetUverschuss mit Sicherungsscheibe Quick Fastener with Lack Washer 9.0. 9.0. 114 M4 M5 M6 M8 M10 M12 10.9. Regalgewinde / Caarse Thread Ø M4 M5 M6 M8 M10 M12 10.9. Regalgewinde / Caarse Thread Ø M4 M5 M6 M8 M10 M1 M14 M16 M14 M6 M1						
4 112 KFT 06.799.971.01 / 972.02 Seitenträger; links / rechts Side Carrier; left / right 2.2 133 SV.57.095.501.LK.02 Schmellverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 - 8.8 Regelgewinde / Coarse Thread M4 M5 M6 M8 M10 M12 1.4 Antonio State St	ID2 KFT.05.799.971.01 / 972.02 Seitenträger; links / rechts Side Carrier; left / right 2.2 ID3 SV.5T.095.501.LK.02 Schnellverschluss mit Sicherungsscheibe Quick Fastener wih Lock Washer B.1 B.8 Regelgewinde / Coarse Thread M4 M5 M6 M8 M10 M1 M10 M1 M1 M5 M6 M8 M10 M1 M1 M1 M1 M1 M1 M1 M M4 M5 M M M10 M M M1 M1 M M M M1 M1 M1 M M M M1 M1 M M M M M1 M1 M						
133 SV.ST.093.501,LK.02 Schnetlverschluss mit Sicherungsscheite Quick Fastener with Lock Washer 8 /* 4	133 SV.ST.095.501.LK.02 Schnellverschluss mit Sicherungsscheibe Duick Fastener with Lock Washer 8 /s 4	[11]	J M6; DIN 6927	Mutter mit Bund, selbstsichernd; schwarz	Lock Nut with Flange; black	2 /2	
13 SV.ST.095.501.LK.02 Schnellverschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 /* 4	113 SV.ST.095.501.LK.02 Schnel/verschluss mit Sicherungsscheibe Quick Fastener with Lock Washer 8 /s 8.3 Regelgewinde / Coarse Thread Ø M4 M5 M6 M8 M10 M12 1.3 Stahl FK 8.8 / Steel CL 88 Wn 2 /k 5.5 9.6 12 4.6 11 1.4 Indexperimentarity regel Index 2 /k 15.7 9.6 12 4.6 11 1.4 Indexperimentarity regel Index 2 /k 15.7 9.6 12 4.6 11 1.4 Indexperimentarity regel Index 2 /k 15.8 9.6 12 12 12 12 12 12 12 12 12 12 12 12 13 14 </td <td></td> <td></td> <td></td> <td></td> <td>-</td> <td></td>					-	
B.8 Regelgewinde / Coarse Thread Ø M4 M5 M6 M8 M10 M12 Tahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.4 22 46 / 7.4	B.8 Regelgewinde / Coarse Thread Ø Má M5 M6 M8 M10 M12 Stahl FK 88 / Steel CL 88 Nm ² extended and the second and th						
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 79 * Aller Madragaber in Millmeter - *** The scenad number reduces the fold quantity of the part in the down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in the table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in the table. The down within the vendes manufacture of the standard targe in the table. The down withis table of the down within the vendes manufa	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 A left Balargaben in Millingert,	[13]	J SV.ST.095.501.LK.02	Schnellverschluss mit Sicherungsscheibe	Quick Fastener with Lock Washer	8 / 8	
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 79 * Aller Madragaber in Millmeter - *** The scenad number reduces the fold quantity of the part in the down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in the table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in the table. The down within the vendes manufacture of the standard targe in the table. The down withis table of the down within the vendes manufa	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 A left Balargaben in Millingert,	_					
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 79 * Aller Madragaber in Millmeter - *** The scenad number reduces the fold quantity of the part in the down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in the table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in this table. The down within the vendes manufacture of the standard targe in the table. The down within the vendes manufacture of the standard targe in the table. The down withis table of the down within the vendes manufa	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 A left Balargaben in Millingert,	_					
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 72 * Alle Malangaben in Millinetra - *** for zweite Wert glub die Gesamtazahl drag jew. Artikels in der Lieferung autority of the zweit werden Gesamt werden Werten Sin de Stahl FK 10.9 / Stahl FK 10.9 / Steel CL 10.9 Nm 4,1 8,1 14 34 67 1 * Allen Sater Actogenoment verselwerden Sin de Stahl Stah	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 * Aller Malangaber in Millingeter : "If a zweite Wright die Gesammazahl des jew. Artikels in der Leferung autorit. The second number indicates the total quantity of the part in the delive "Neigher Second autority of the part in the delive "Neigher Se						
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 72 * Alle Malangaben in Millinetra - *** for zweite Wert glub die Gesamtazahl drag jew. Artikels in der Lieferung autority of the zweit werden Gesamt werden Werten Sin de Stahl FK 10.9 / Stahl FK 10.9 / Steel CL 10.9 Nm 4,1 8,1 14 34 67 1 * Allen Sater Actogenoment verselwerden Sin de Stahl Stah	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 * Aller Malangaber in Millingeter : "If a zweite Wright die Gesammazahl des jew. Artikels in der Leferung autorit. The second number indicates the total quantity of the part in the delive "Neigher Second autority of the part in the delive "Neigher Se						
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 72 * Alle Malangaben in Millinetra - *** for zweite Wert glub die Gesamtazahl drag jew. Artikels in der Lieferung autority of the zweit werden Gesamt werden Werten Sin de Stahl FK 10.9 / Stahl FK 10.9 / Steel CL 10.9 Nm 4,1 8,1 14 34 67 1 * Allen Sater Actogenoment verselwerden Sin de Stahl Stah	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 * Aller Malangaber in Millingeter : "If a zweite Wright die Gesammazahl des jew. Artikels in der Leferung autorit. The second number indicates the total quantity of the part in the delive "Neigher Second autority of the part in the delive "Neigher Se	-					
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 72 * Alle Malangaben in Millinetra - *** for zweite Wert glub die Gesamtazahl drag jew. Artikels in der Lieferung autority of the zweit werden Gesamt werden Werten Sin de Stahl FK 10.9 / Stahl FK 10.9 / Steel CL 10.9 Nm 4,1 8,1 14 34 67 1 * Allen Sater Actogenoment verselwerden Sin de Stahl Stah	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 * Aller Malangaber in Millingeter : "If a zweite Wright die Gesammazahl des jew. Artikels in der Leferung autorit. The second number indicates the total quantity of the part in the delive "Neigher Second autority of the part in the delive "Neigher Se						
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 72 * Alle Malangaben in Millinetra - *** for zweite Wert glub die Gesamtazahl drag jew. Artikels in der Lieferung autority of the zweit werden Gesamt werden Werten Sin de Stahl FK 10.9 / Stahl FK 10.9 / Steel CL 10.9 Nm 4,1 8,1 14 34 67 1 * Allen Sater Actogenoment verselwerden Sin de Stahl Stah	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 * Aller Malangaber in Millingeter : "If a zweite Wright die Gesammazahl des jew. Artikels in der Leferung autorit. The second number indicates the total quantity of the part in the delive "Neigher Second autority of the part in the delive "Neigher Se						
 Stahl FK 8.8 / Steel CL 8.8 Nm 2,8 5,5 9,6 23 46 72 * Alle Malangaben in Millinetra - *** for zweite Wert glub die Gesamtazahl drag jew. Artikels in der Lieferung autority of the zweit werden Gesamt werden Werten Sin de Stahl FK 10.9 / Stahl FK 10.9 / Steel CL 10.9 Nm 4,1 8,1 14 34 67 1 * Allen Sater Actogenoment verselwerden Sin de Stahl Stah	Stahl FK 8.8 / Steel CL 8.8 Nm 2.8 5.5 9.6 23 46 79 * Aller Malangaber in Millingeter : "If a zweite Wright die Gesammazahl des jew. Artikels in der Leferung autorit. The second number indicates the total quantity of the part in the delive "Neigher Second autority of the part in the delive "Neigher Se						
 The Managaham in Millinetra, - " The revent were the data manaphing in the data in data Leftcarg in the Managaham strategies by revented Size data were definited Augustment the Managaham strategies by revented Size data were definited Augustment the Managaham strategies by the Managaham strategies by	 All Magnaphin in Millinetry " for view the tradit of Garmanizable despines Articles in der Lekrong autority of the year in the delter " Naio Articles and european indicates the total quantity of the part in the delter " Naio Articles perfections to millinetry " The second number indicates the total quantity of the part in the delter " Naio Articles perfections to millinetry " The second number indicates the total quantity of the part in the delter " Naio Articles perfections." All magnations to the total end end by which manufactured The standard torque in this table to delter as in a site within the vehicle manufacture's specifications. All magnations to the total end end by which manufacture of the standard torque in this table to delter as in a site within the vehicle manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end end by which manufacture's specifications. All magnations to the total end by which manufacture's specifications. All magnations to the total end by which manufacture's specifications. 	8.8					

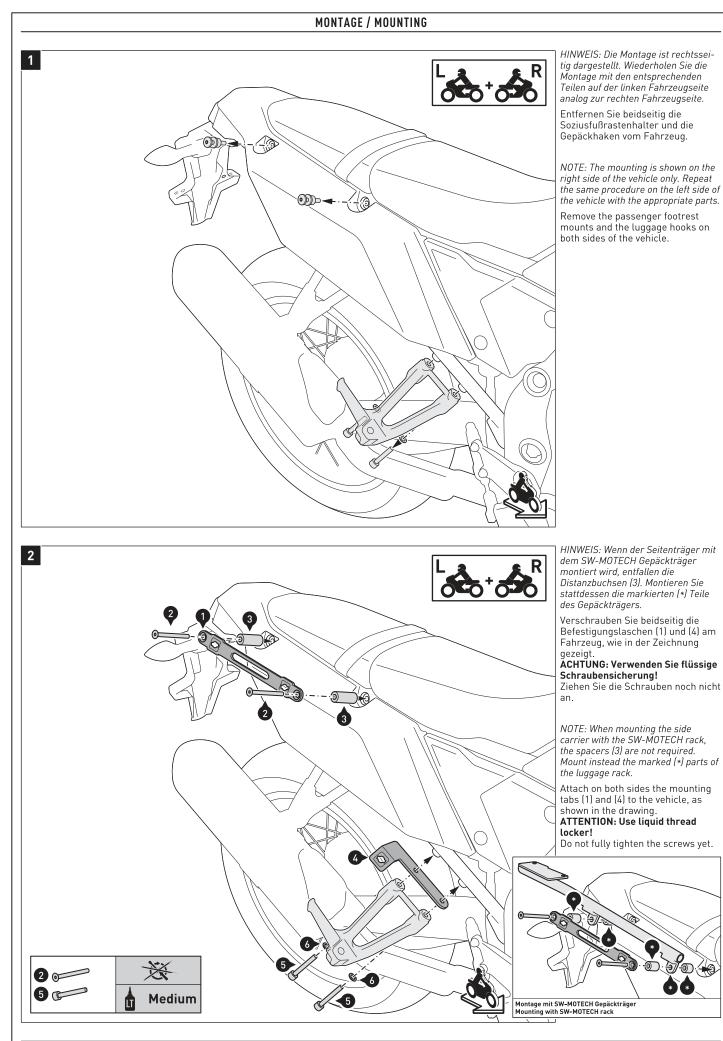



Yo 🍯

* *

Ð

3

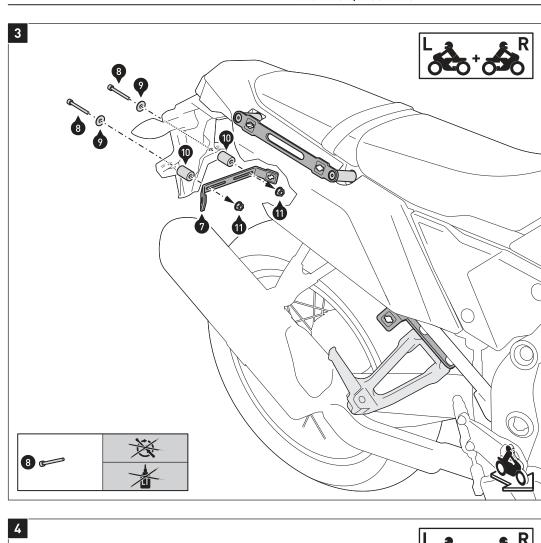

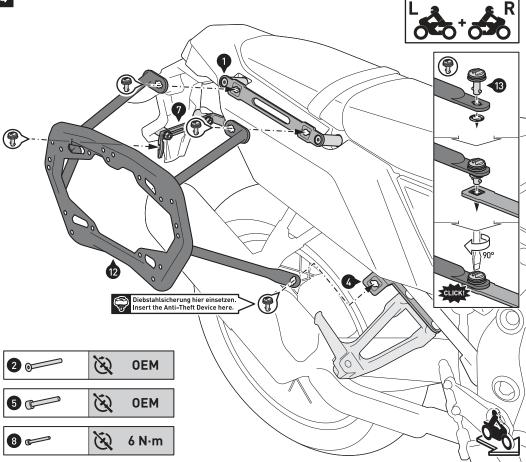

HINWEIS: Falls der original Zubehör-Kennzeichenhalter montiert ist, entfällt dieser Montageschritt. Montieren Sie den Querverbinder (7) mit den Schnellverschlüssen (13) zwischen den Seitenträgern (12), wie in Schritt [4] gezeigt. Die Teile (8) bis (11) entfallen.

Verschrauben Sie den Querverbinder (7) an den innenliegenden Kennzeichenbohrungen des Kotflügels, wie in der Zeichnung gezeigt. Ziehen Sie die Schrauben noch nicht

an.

NOTE: If the original accessory license plate holder is mounted, this mounting step will be omitted. Mount the crossbar (7) with the quick fastener (13) between the side carriers (12) as shown in step [4]. The parts (8) to (11) are not required.

Attach the crossbar (7) to the inner license plate holes of the mudguard, as shown in the drawing. Do not fully tighten the screws yet.

Verbinden Sie die Seitenträger (12) mit den Schnellverschlüssen (13) an den Befestigungslaschen (1) und (4) und dem Querverbinder (7), wie in der Zeichnung gezeigt. Sichern Sie die Schnellverschlüsse (13) mit den Sicherungsscheiben.

Wenn alle Komponenten spannungsfrei sitzen, ziehen Sie die Schrauben (2) und (5) (siehe Schritt [2]) nach Herstellerangaben an.

Ziehen Sie die Schrauben (8) wie vorgegeben an.

HINWEIS: Die Diebstahlsicherung ist separat erhältlich.

Connect the side carriers [12] with the quick fasteners (13) to the mounting tabs (1) and (4) and the crossbar (7), as shown in the drawing. Secure the the quick fasteners (13) with the lock washers.

Once all parts are evenly positioned without excess tension, tighten the screws (2) and (5) (see step [2]) with the manufacturer s specified torque.

Tighten the screws (7) as specified. NOTE: The Anti-Theft Device is sold

separately.

MOUNTING INSTRUCTIONS • READ	AND KEEP MOUNTING INSTRUCTIONS!
Item number: KFT.00.152.36000	Revision: 00 · Date: 08 - 2023
Adapter kit for F	PRO side carrier
() ~ 0.25 h.	DIFFICULT میکو میکو میکو میکو میکو میکو
ENGLISH •Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.	PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.
Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference. This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot	engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design

▲ WARNING: Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

▲ DANGER: Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

▲ WARNING: Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.

SAFETY WARNING SYMBOL

changes. The copyright is held by SW-MOTECH.

be guaranteed.

 \triangle This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

DANGER: Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

A WARNING: Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

A CAUTION: Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

▲ **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

▲ WARNING: Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

▲ WARNING: If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

₩*ѕш-тотесн*°

SW-MOTECH GmbH & Co. KG Ernteweg 7-10 35282 Rauschenberg Germany

⊡ \$ © F

➡ info@sw-motech.com
➡ www.sw-motech.com

1

LEGEND OVERVIEW • READ AND KEEP MOUNTING INSTRUCTIONS!



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



Do not use thread lock: Indicates that no liquid thread lock should be used at this point.



Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.




If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop: www.sw-motech.com



Tighten/note the tightening torque information: Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

	PARTS	LIST • READ AND KEEP	MOUNTING INSTRUCTIONS!		
1 H5K.00.745.025.35GR 2/2	2 M6 x 12; ISO 7380 Sc.ST.06.012.02.7380.109 T 4/4	3 6PT.00.152.010.35 T 4/4	▲ M6 x 25; DIN 7991 SC.ST.06.025.02.7991.088 ₩ 4/4	5 M6; DIN 6927 MU.ST.06.02.6927.08 T 4/4	б КFT.00.152.026.02 КFT.00.152.026.02 В/8
The content translation is automated. © SW-MOTECH GmbH & Co. KG		3 -		Subje	Errors and omissions excepted act to technical and design changes.

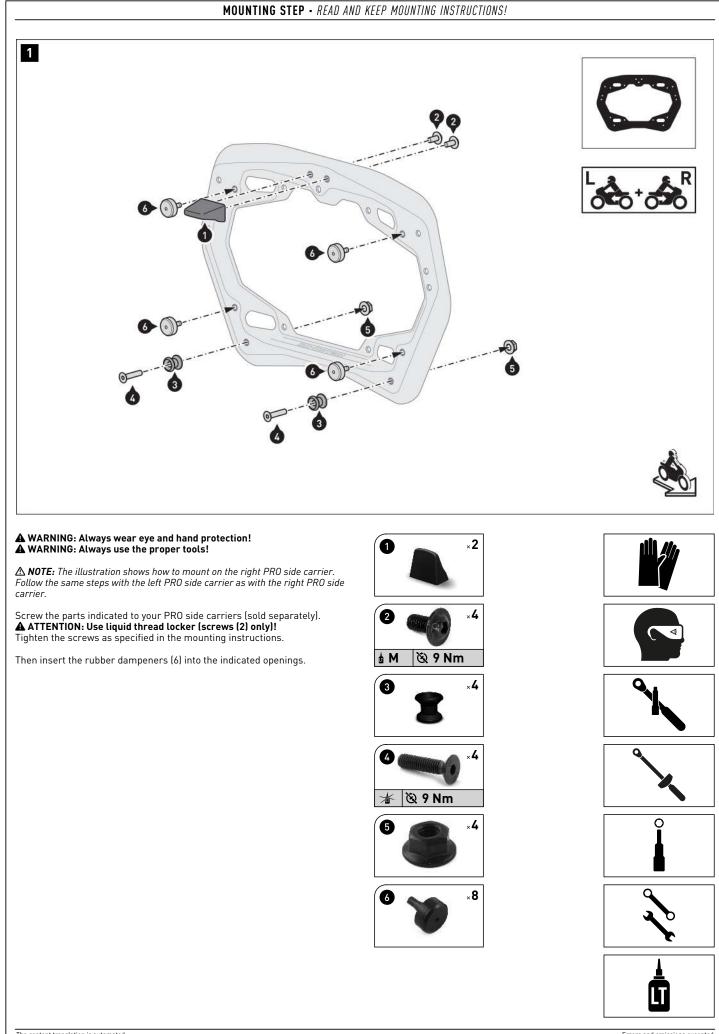

PRODUCT-SPECIFIC NOTES

\triangle NOTE: Observe the country-specific regulations for the registration/operation of your vehicle or applicable TÜV regulations. After assembly, have parts that are subject to registration entered in the vehicle documents by your test centre.

MOUNTING INSTRUCTIONS • READ AND KEEP MOUNTING INSTRUCTIONS!			
Item number: HSK.00.745.11000/B	Revision: 03 · Date: 09 - 2023		
DU	ISC L		
() ~ 0.25 h.	DIFFICULT میکر میکر میکر میکر میکر میکر میکر میک		

ENGLISH -Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 \triangle This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

DANGER: Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

WARNING: Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

A CAUTION: Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

▲ **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

▲ WARNING: Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

▲ WARNING: If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE! **PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

▲ CAUTION: Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

▲ WARNING: Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

▲ DANGER: Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK:After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

▲ WARNING: Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.

\7 *ѕш-тотесн*°

SW-MOTECH GmbH & Co. KG Ernteweg 7-10 35282 Rauschenberg Germany

D101

■ info@sw-motech.com
■ www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



Do not use thread lock: Indicates that no liquid thread lock should be used at this point.




If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop: www.sw-motech.com



Tighten by hand: Indicates that the attachment must be carefully tightened by hand.

PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!	
HSK.00.745.80000/B	
2 2	
HSK.00.745.027.02	
11 2 /2	
3 3 6 5	
4 x 10; WN 1452 T20 sc.st.040.010.48.1452.109 TRX.T20	
The line The line The line The line	
The content translation is automated.	Errors and omissions excepted

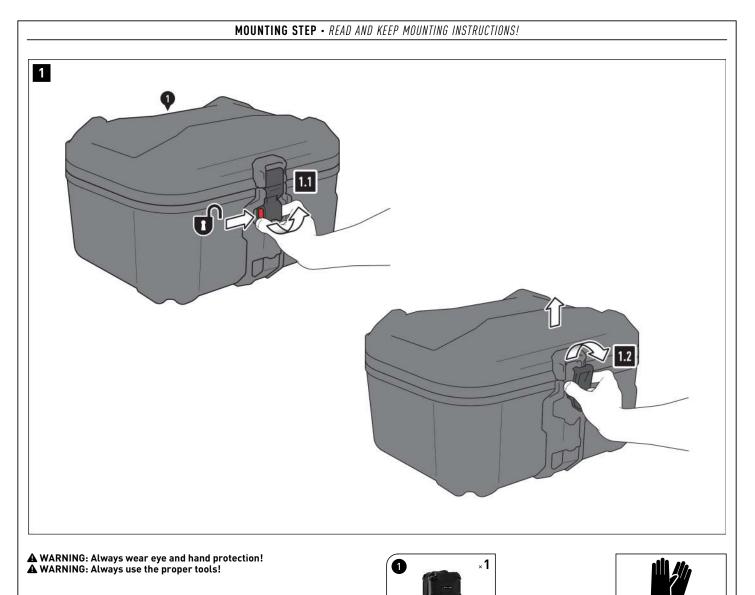


Opening the lid

 $\ensuremath{\textbf{1.1}}$ - Press the DUSC release button (1) and pull the lid latch buckle to the open position.

 $\ensuremath{\textbf{1.2}}$ - Remove the latch buckle from the corresponding bracket and open the lid.



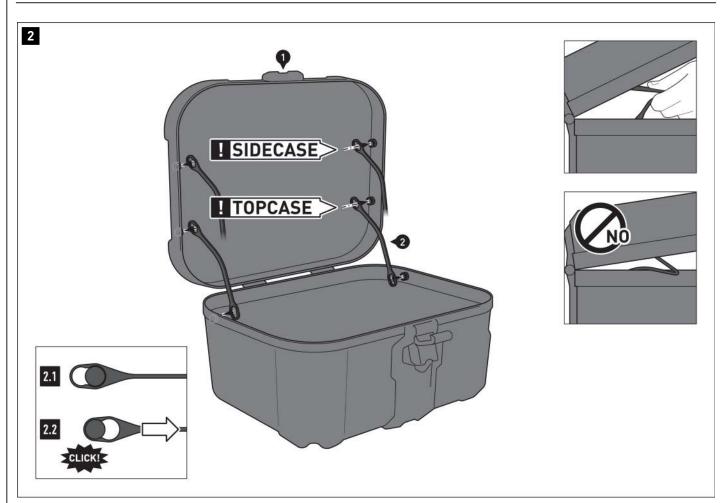



Installing the lid limiter

2.1 - Place the lid limiters (2) with the large openings on the mushroom-shaped supports provided ▲ NOTE: Pay attention to the proper use of the DUSC (1):top case or side case. Fasten the lid limiters (2) to the respective mushroom-shaped DUSC (1).

2.2 - Pull the lid limiters (2) into fixed position.

▲ **NOTE:** Before closing the lid for the first time, the lid limiters (2) must be slightly compressed. When closing the lid, make sure that the lid limiters (2) are not trapped between the lid and the case body.

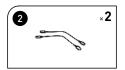

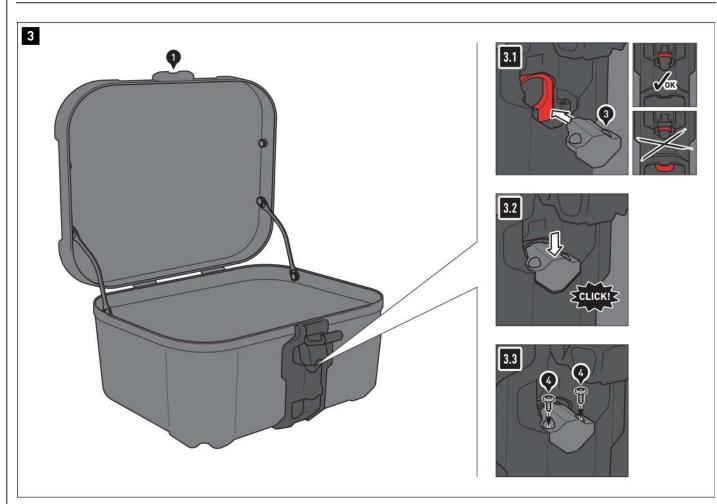

Installing lock casing connector

▲ **NOTE:** If you have opted for the DUSC lock set, this step is not necessary. Install the lock set instead.


3.1 - Open the DUSC latch buckle (1) and position the latch housing connector (3) as shown.


NOTE: Make sure the locking tab is in the unlocked (up) position. If necessary, the locking tab must be pushed up into the unlocked position.

3.2 - Push the latch housing connector (3) down until it clicks into place.

3.3 - Screw in the latch housing connector (3) using the screws (4) and the torx key (5). Carefully tighten the screws by hand. **A** WARNING: Over-tightening the screws may damage the lock casing!

NOTE: Ensure that the locking mechanism is in working order!

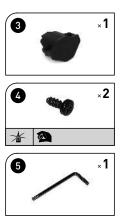

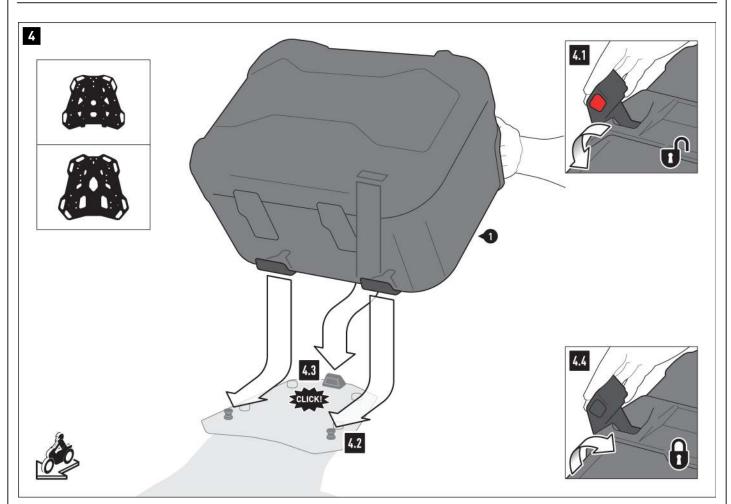

Attaching the DUSC to a top case

 $\mbox{\bf 4.1}$ - Press the DUSC release button [1] and pull the fastening system latch buckle to the open position.

4.2 - Press the DUSC (1) with the two locking openings onto the mushroomshaped supports of your SW-MOTECH rack.


4.3 - Press the DUSC (1) with the locking opening onto the locking lug of your SW-MOTECH rack.

A WARNING: You should be able to hear a clicking sound!

4.4 - Press the system latch buckle to closed position. **A** WARNING: Ensure the DUSC is firmly positioned!

▲ WARNING: Make sure that no components of the DUSC (1) can come into contact with any hot and moving parts on the vehicle! Also ensure that all components are at least 5 cm away from hot parts as

well as hot gas coming from the exhaust! After assembly, make sure that this distance is maintained in all vehicle positions!

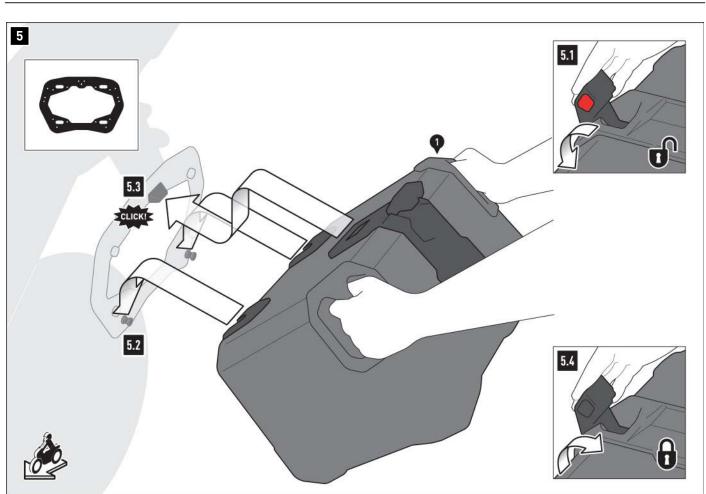

Attaching the DUSC to a side case

 $\ensuremath{\textbf{5.1}}$ - Press the DUSC release button (1) and pull the system latch buckle to the open position.

 ${\bf 5.2}$ - Press the DUSC (1) with the two locking openings onto the mushroom-shaped supports of your SW-MOTECH side carrier.

 ${\bf 5.3}$ - Press the DUSC (1) with the locking opening onto the locking lug of your SW-MOTECH side carrier.


A WARNING: You should be able to hear a clicking sound!

5.4 - Press the system latch buckle to closed position. **A** WARNING: Ensure the DUSC is firmly positioned!

▲ WARNING: Make sure that no components of the DUSC (1) can come into contact with any hot and moving parts on the vehicle! Also ensure that all components are at least 5 cm away from hot parts as

well as hot gas coming from the exhaust! After assembly, make sure that this distance is maintained in all vehicle

positions!

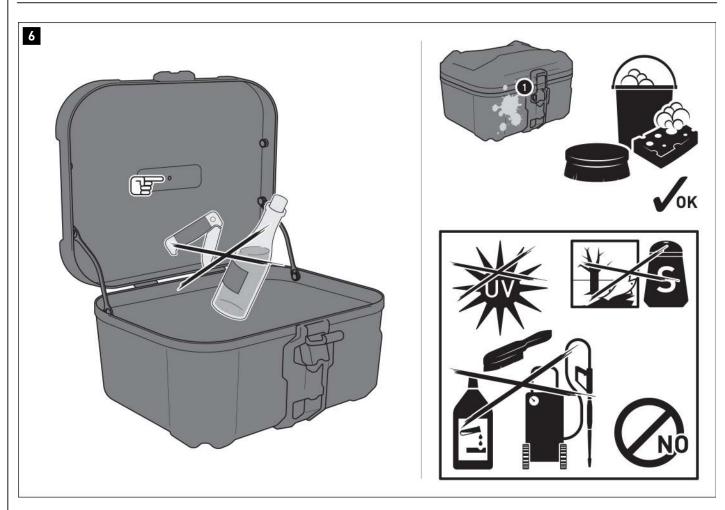

Loading

▲ WARNING: Ensure that the load is evenly distributed! Ensure that the load will not slip while driving! ▲ NOTE: Make sure never to store sharp-edged, pointed or similar objects that could cause personal injury or damage to the vehicle/DUSC! Be particularly careful not to damage the overpressure membrane built into the lid!

Care

Use ONLY a soft textile brush, cloth or sponge and warm soapy water for cleaning! Then rinse with clean water.

Do NOT use any harsh cleaning agents, utensils or pressure washer! Be sure to clean the DUSC after winter driving to avoid salt damage. ▲ NOTE: Surface materials may be subject to fluctuations in color (fading) in the

event of prolonged and intensive exposure to sunlight and the elements [e.g. smog, acid rain, etc.]! SW-MOTECH is not responsible for this type of wear!

PRODUCT-SPECIFIC NOTES

▲ **NOTE:** Observe the country-specific regulations for registering/operating your vehicle or the applicable TÜV regulations. After assembly, have parts that are subject to registration entered in the vehicle documents by your test centre.

▲ DANGER: Carry out a comprehensive function check before driving!

▲ DANGER: Check that the product is properly positioned before departure and at every rest stop (every 200 km)!

A DANGER: The driving/braking behavior of the motorcycle changes noticeably after the attachment of this product!

▲ DANGER: Lean angle and ground clearance may be restricted by this product!

 \clubsuit DANGER: The maximum vehicle load specified by the vehicle manufacturer is applicable

Use as a top case:



Use as a side case:

\triangle \leq 10KG (\leq 22 lbs)	\odot	\leq 130km/h (\leq 80mph)
--	---------	--------------------------------

MOUNTING INSTRUCTIONS • READ AND KEEP MOUNTING INSTRUCTIONS!		
Item number: HSK.00.745.10000/B	Revision: 03 · Date: 09 - 2023	
	DUSC M	
🕓 ~ 0.25 h.	DIFFICULT میک میک میک میک میک	

ENGLISH -Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 \triangle This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

DANGER: Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

WARNING: Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

A CAUTION: Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

▲ **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

▲ WARNING: Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

▲ WARNING: If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE! **PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

▲ CAUTION: Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

▲ WARNING: Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

▲ DANGER: Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK:After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

▲ WARNING: Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.

\7 *ѕш-тотесн*°

SW-MOTECH GmbH & Co. KG Ernteweg 7-10 35282 Rauschenberg Germany

D101

■ info@sw-motech.com
■ www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



Do not use thread lock: Indicates that no liquid thread lock should be used at this point.




If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop: www.sw-motech.com



Tighten by hand: Indicates that the attachment must be carefully tightened by hand.

PARTS LIST • READ AND KEEP MOUNTING INSTRUCTIONS!	
HSK.00.745.80000/B	
2 2	
HSK.00.745.027.02	
11 2 /2	
3 3 6 5	
4 x 10; WN 1452 T20 sc.st.040.010.48.1452.109 TRX.T20	
The line The line The line The line	
The content translation is automated.	Errors and omissions excepted

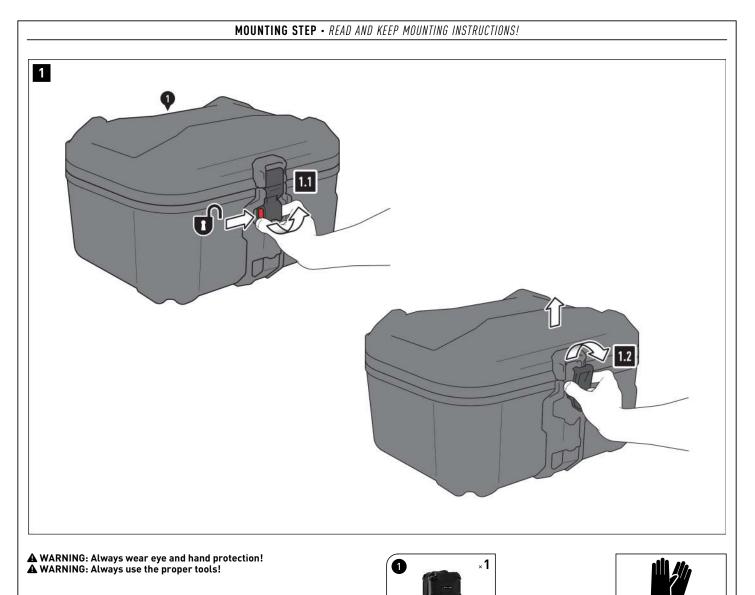


Opening the lid

 $\ensuremath{\textbf{1.1}}$ - Press the DUSC release button (1) and pull the lid latch buckle to the open position.

 $\ensuremath{\textbf{1.2}}$ - Remove the latch buckle from the corresponding bracket and open the lid.



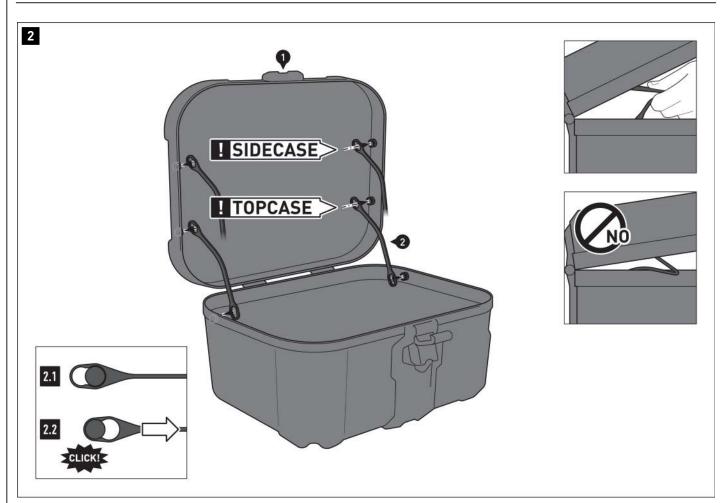



Installing the lid limiter

2.1 - Place the lid limiters (2) with the large openings on the mushroom-shaped supports provided ▲ NOTE: Pay attention to the proper use of the DUSC (1):top case or side case. Fasten the lid limiters (2) to the respective mushroom-shaped DUSC (1).

2.2 - Pull the lid limiters (2) into fixed position.

▲ **NOTE:** Before closing the lid for the first time, the lid limiters (2) must be slightly compressed. When closing the lid, make sure that the lid limiters (2) are not trapped between the lid and the case body.

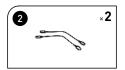

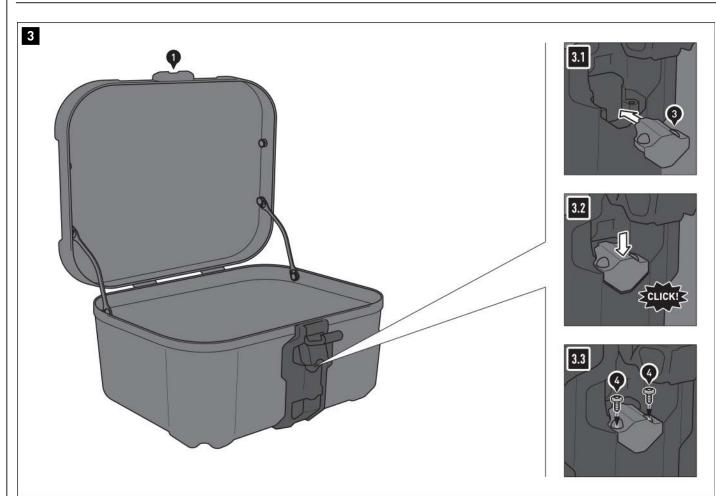


Installing lock casing connector


▲ **NOTE:** If you have opted for the DUSC lock set, this step is not necessary. Install the lock set instead.

3.1 - Open the DUSC latch buckle (1) and position the latch housing connector (3) as shown.

3.2 - Push the latch housing connector (3) down until it clicks into place.

3.3 - Screw in the latch housing connector (3) using the screws (4) and the torx key (5). Carefully tighten the screws by hand.
 A WARNING: Over-tightening the screws may damage the lock casing!

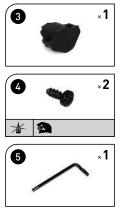

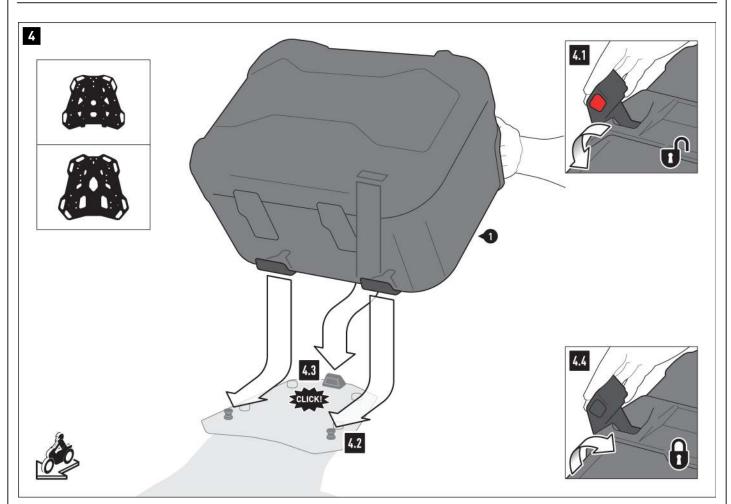

Attaching the DUSC to a top case

 $\mbox{\bf 4.1}$ - Press the DUSC release button [1] and pull the fastening system latch buckle to the open position.

4.2 - Press the DUSC (1) with the two locking openings onto the mushroomshaped supports of your SW-MOTECH rack.


4.3 - Press the DUSC (1) with the locking opening onto the locking lug of your SW-MOTECH rack.

A WARNING: You should be able to hear a clicking sound!

4.4 - Press the system latch buckle to closed position. **A** WARNING: Ensure the DUSC is firmly positioned!

▲ WARNING: Make sure that no components of the DUSC (1) can come into contact with any hot and moving parts on the vehicle! Also ensure that all components are at least 5 cm away from hot parts as

well as hot gas coming from the exhaust! After assembly, make sure that this distance is maintained in all vehicle positions!

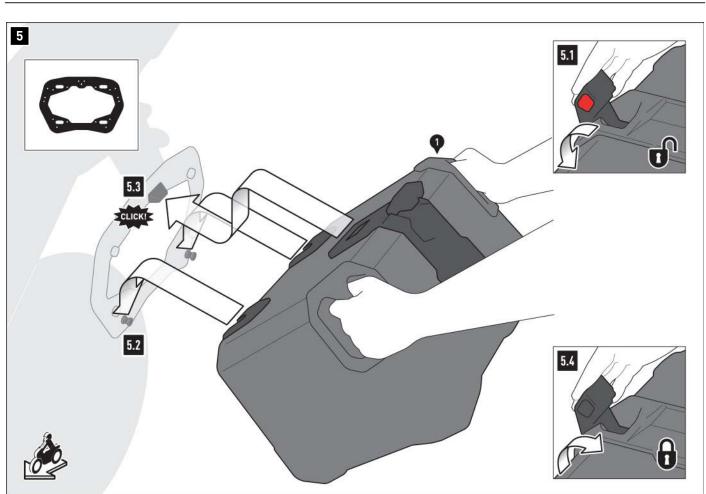

Attaching the DUSC to a side case

 $\ensuremath{\textbf{5.1}}$ - Press the DUSC release button (1) and pull the system latch buckle to the open position.

 ${\bf 5.2}$ - Press the DUSC (1) with the two locking openings onto the mushroom-shaped supports of your SW-MOTECH side carrier.

 ${\bf 5.3}$ - Press the DUSC (1) with the locking opening onto the locking lug of your SW-MOTECH side carrier.


A WARNING: You should be able to hear a clicking sound!

5.4 - Press the system latch buckle to closed position. **A** WARNING: Ensure the DUSC is firmly positioned!

▲ WARNING: Make sure that no components of the DUSC (1) can come into contact with any hot and moving parts on the vehicle! Also ensure that all components are at least 5 cm away from hot parts as

well as hot gas coming from the exhaust! After assembly, make sure that this distance is maintained in all vehicle

positions!

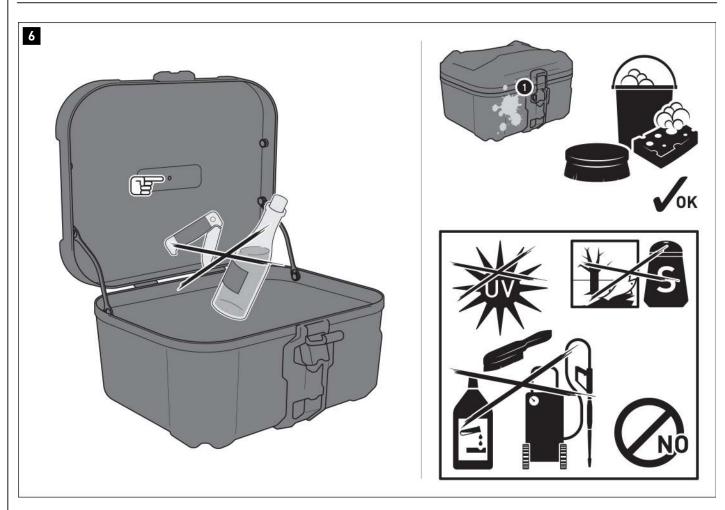

Loading

▲ WARNING: Ensure that the load is evenly distributed! Ensure that the load will not slip while driving! ▲ NOTE: Make sure never to store sharp-edged, pointed or similar objects that could cause personal injury or damage to the vehicle/DUSC! Be particularly careful not to damage the overpressure membrane built into the lid!

Care

Use ONLY a soft textile brush, cloth or sponge and warm soapy water for cleaning! Then rinse with clean water.

Do NOT use any harsh cleaning agents, utensils or pressure washer! Be sure to clean the DUSC after winter driving to avoid salt damage. ▲ NOTE: Surface materials may be subject to fluctuations in color (fading) in the

event of prolonged and intensive exposure to sunlight and the elements [e.g. smog, acid rain, etc.]! SW-MOTECH is not responsible for this type of wear!

PRODUCT-SPECIFIC NOTES

▲ **NOTE:** Observe the country-specific regulations for registering/operating your vehicle or the applicable TÜV regulations. After assembly, have parts that are subject to registration entered in the vehicle documents by your test centre.

▲ DANGER: Carry out a comprehensive function check before driving!

▲ DANGER: Check that the product is properly positioned before departure and at every rest stop (every 200 km)!

A DANGER: The driving/braking behavior of the motorcycle changes noticeably after the attachment of this product!

▲ DANGER: Lean angle and ground clearance may be restricted by this product!

 \clubsuit DANGER: The maximum vehicle load specified by the vehicle manufacturer is applicable

Use as a top case:



Use as a side case:

\triangle \leq 10KG (\leq 22 lbs)	\odot	\leq 130km/h (\leq 80mph)
--	---------	--------------------------------

Revision: 00 · Date: 08 - 2023		
Hard case lock set		
DIFFICULT مترمتر مترمتر مترمتر		

ENGLISH Thank you for choosing this premium product from SW-MUTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 \triangle This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

DANGER: Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

WARNING: Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

A CAUTION: Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

▲ **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

▲ WARNING: Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

▲ WARNING: If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE! **PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

▲ CAUTION: Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

▲ WARNING: Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

▲ DANGER: Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK:After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

▲ WARNING: Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.

\7 *ѕш-тотесн*°

SW-MOTECH GmbH & Co. KG Ernteweg 7-10 35282 Rauschenberg Germany

⊡1©1

■ info@sw-motech.com
■ www.sw-motech.com


1



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop: www.sw-motech.com

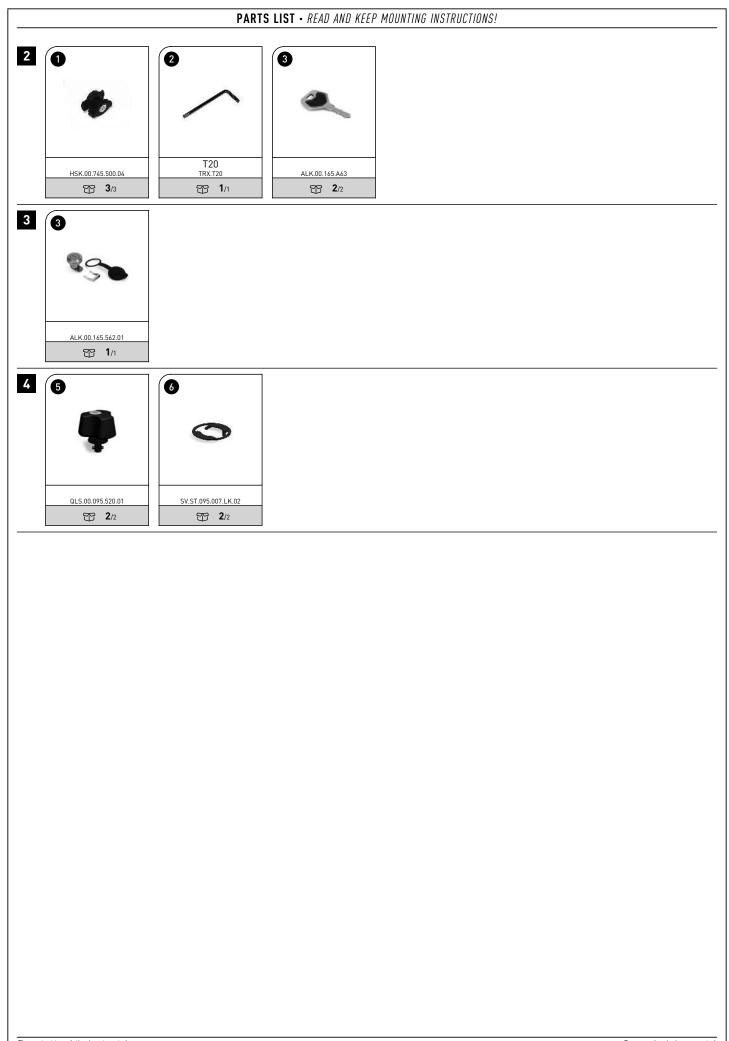

▲ WARNING: Always wear eye and hand protection! ▲ WARNING: Always use the proper tools!

Opening the lid

 ${\bf 1.1}$ - Press the DUSC release button (*) and pull the lid latch buckle into the open position.

 $\ensuremath{\textbf{1.2}}$ - Remove the latch buckle from the corresponding bracket and open the lid.







Install DUSC lock

 
2.1 - Open the DUSC (*) latch buckle and position the lock (1) as shown. ▲ **NOTE: DUSC L ONLY:** Make sure the locking tab (highlighted in red) is in the unlocked position (up)! If necessary, the locking tab must be pushed up into the unlocked position!

2.2 - Push the lock (1) down until it clicks into place.


2.3 - Screw in the lock (1) using the screws (*) supplied with the DUSC and the torx key (2). Carefully tighten the screws by hand.
A WARNING: Over-tightening the screws may damage the lock casing!

NOTE: Ensure that the locking mechanism is in working order!

NOTE: NEVER lubricate the lock cylinder with oil! Only use graphite powder!





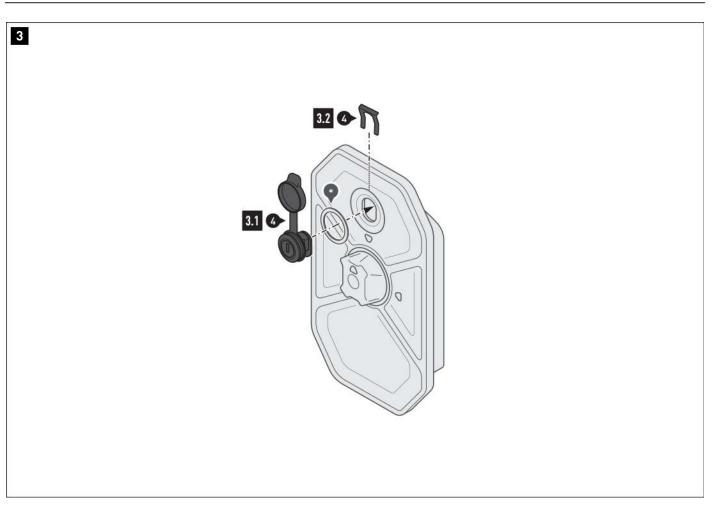


3

×1

Install toolbox lock

3.1 - Insert the lock (4) with the sealing ring (*) supplied with the toolbox in the lock hole of the cover. Secure the lock (4) on the inside with the safety clip (4)

▲ **NOTE:** NEVER lubricate the lock cylinder with oil! Only use graphite powder!

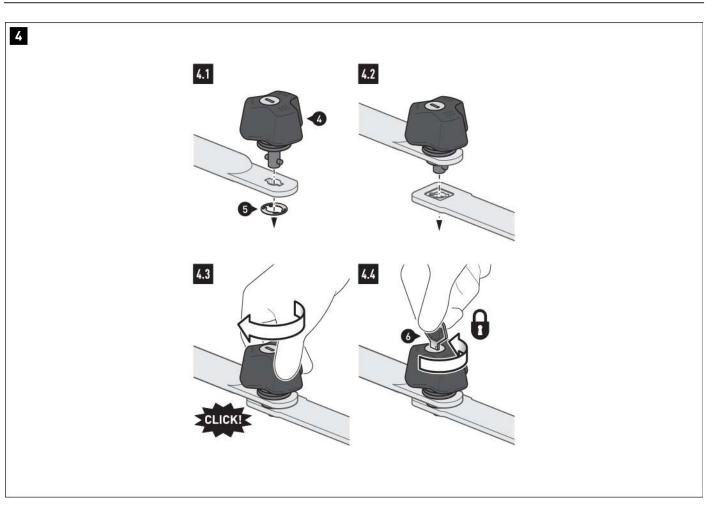

Mount anti-theft protection device for PRO side carrier

4.1 - Insert the anti-theft protection device (5) into the side carrier opening defined in the side carrier mounting instructions. Secure the anti-theft protection device (5) with the lock washer (6).

4.2 - Now insert the anti-theft protection device (5) in the opening of the side support fastener \ldots

4.3 - ... and turn the anti-theft protection device (5) until it engages.

4.4 - Then the anti-theft protection device (5) must be secured against unscrewing.

NOTE: NEVER lubricate the lock cylinder with oil! Only use graphite powder!



PRODUCT-SPECIFIC NOTES

\triangle NOTE: Observe the country-specific regulations for the registration/operation of your vehicle or applicable TÜV regulations. After assembly, have parts that are subject to registration entered in the vehicle documents by your test centre.