

Item number: BC.HTA.00.409.20000

Revision: 00 · Date: 10 - 2025

## Legend Gear saddle bag LR3

 ~ 0.25 h.EASY     DIFFICULT

**ENGLISH** Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

## SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

## GENERAL INFORMATION

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

**PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

**ASSEMBLY:** All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

**FUNCTIONAL CHECK:** After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG  
Ernteweg 7-10  
35282 Rauschenberg  
Germany



[info@sw-motech.com](mailto:info@sw-motech.com)  
[www.sw-motech.com](http://www.sw-motech.com)



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:

**[www.sw-motech.com](http://www.sw-motech.com)**

**PARTS LIST - READ AND KEEP MOUNTING INSTRUCTIONS!**

**1**

**1**



BC.HTA.00.409.20000

 **1/1**

**2**



LSF.350.250

 **1/1**

**2**

**3**



BC.ZUB.00.147.30000

 **1/1**

**4**



BC.ZUB.00.004.001

 **1/1**


**4**

**5**



BC.ZUB.00.157.001.00

 **1/1**

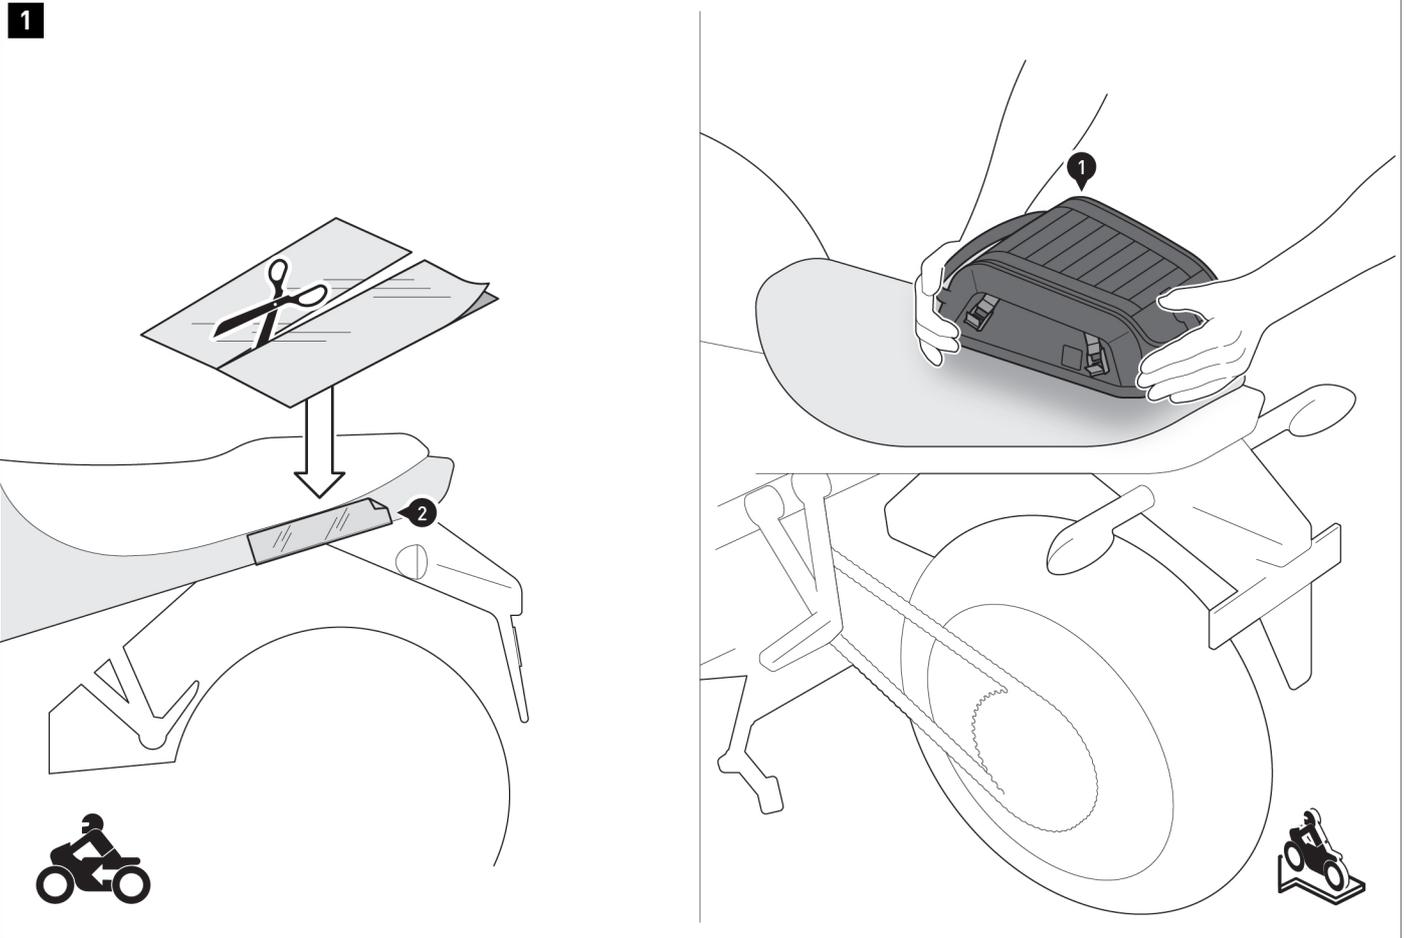

**⚠ WARNING: Always wear eye and hand protection!**  
**⚠ WARNING: Always use suitable tools!**


**⚠ WARNING: Since this is a universal product, please make sure that the product can be attached and used correctly and properly on your vehicle type BEFORE using for the first time!**


**⚠ NOTE:** Use the protective adhesive foil (2) enclosed to protect vehicle parts that are susceptible to abrasion and that the tail bag (1) and/or parts of it may come into contact with. To do so, it may be necessary to first attach the tail bag (1) as described in the following installation steps.

Thoroughly clean the surfaces to be covered of any grease and dirt residue. Cut out the protective adhesive foil (2) according to the contact surfaces.

**⚠ WARNING: Risk of injury!**  
 Apply the protective adhesive foil (1) to **both** sides of the tail bag (2).

Then place the tail bag (1) at the rear of the vehicle.

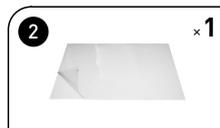

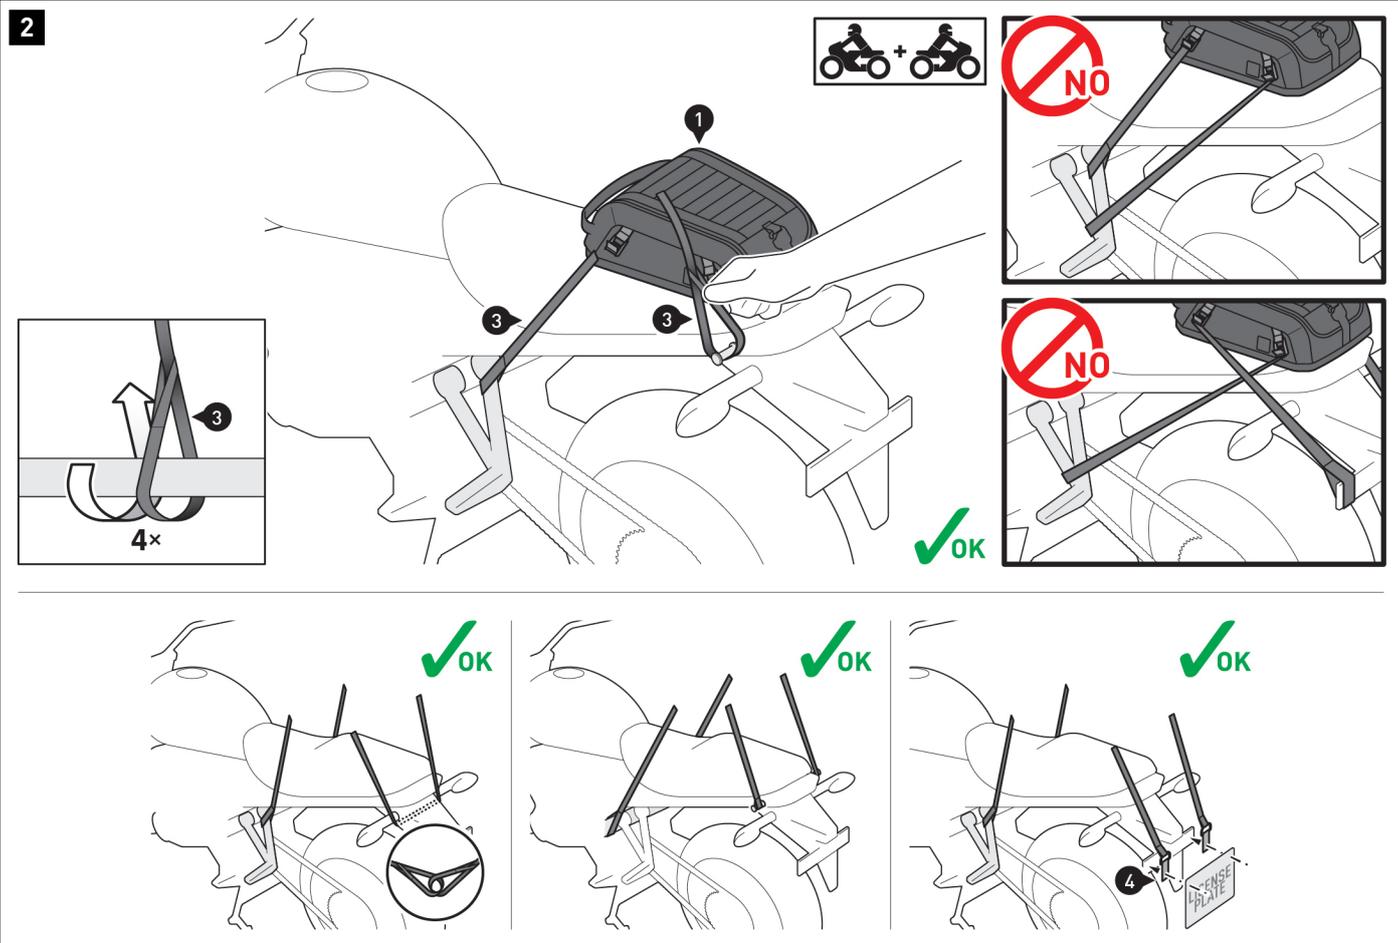


Attach the loop straps (3) to **four** suitable and strong attachment points on the vehicle (e.g. footrest mount, vehicle frame, luggage hook).

**⚠ WARNING:** The attachment points must be selected so that the tail bag (1) sits securely after installation and cannot slip. Two loop straps (3) must be attached to the vehicle in front of the tail bag (1), and two loop straps (3) must be attached to the vehicle behind the tail bag (1).

**⚠ NOTE:** In the case of heavy-duty licence plate holders, SW-MOTECH recommends attaching the tail bag (1) to the lashing eyes (4). Secure the lashing eyes (4) behind the licence plate using the original screws.




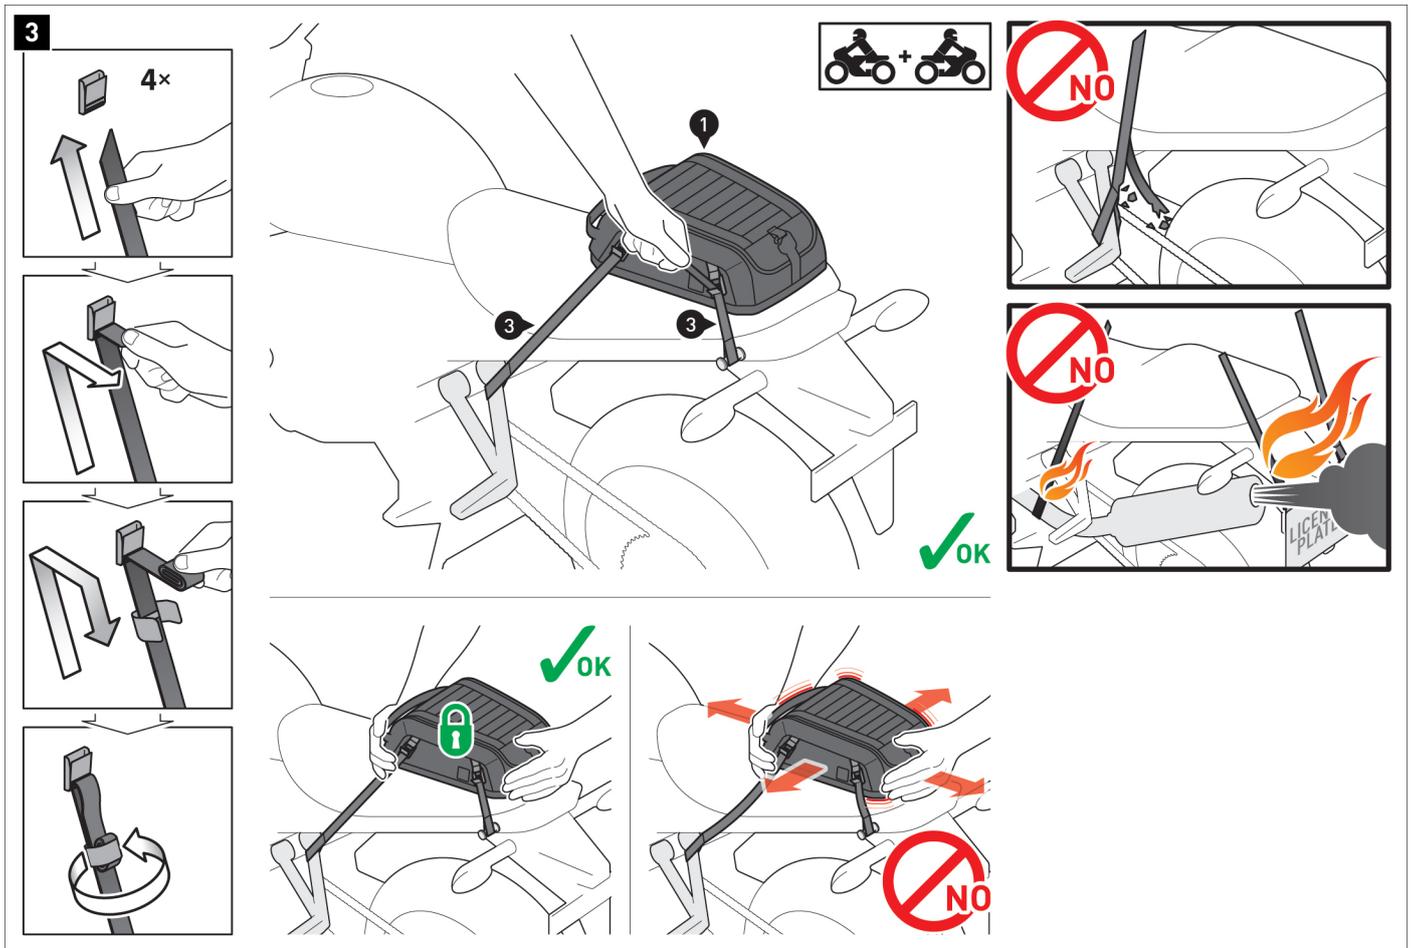

Pull the ends of the **four** loop straps (3) through the **four** buckles of the tail bag (1).  
 Then pull the loop straps (3) tight until the tail bag (1) is centred and firmly attached to the vehicle.  
 Roll up the excess length of the loop straps (3), and secure them with the Velcro strips.

**▲ WARNING:** Ensure that no components of the tail bag (1) come into contact with hot or moving parts of the vehicle. Also ensure that all components are at least 5 cm away from hot parts and the hot exhaust stream. After installation, ensure that this distance is maintained in all suspension conditions of the vehicle.

**▲ WARNING:** Check that the tail bag (1) is firmly and properly seated.

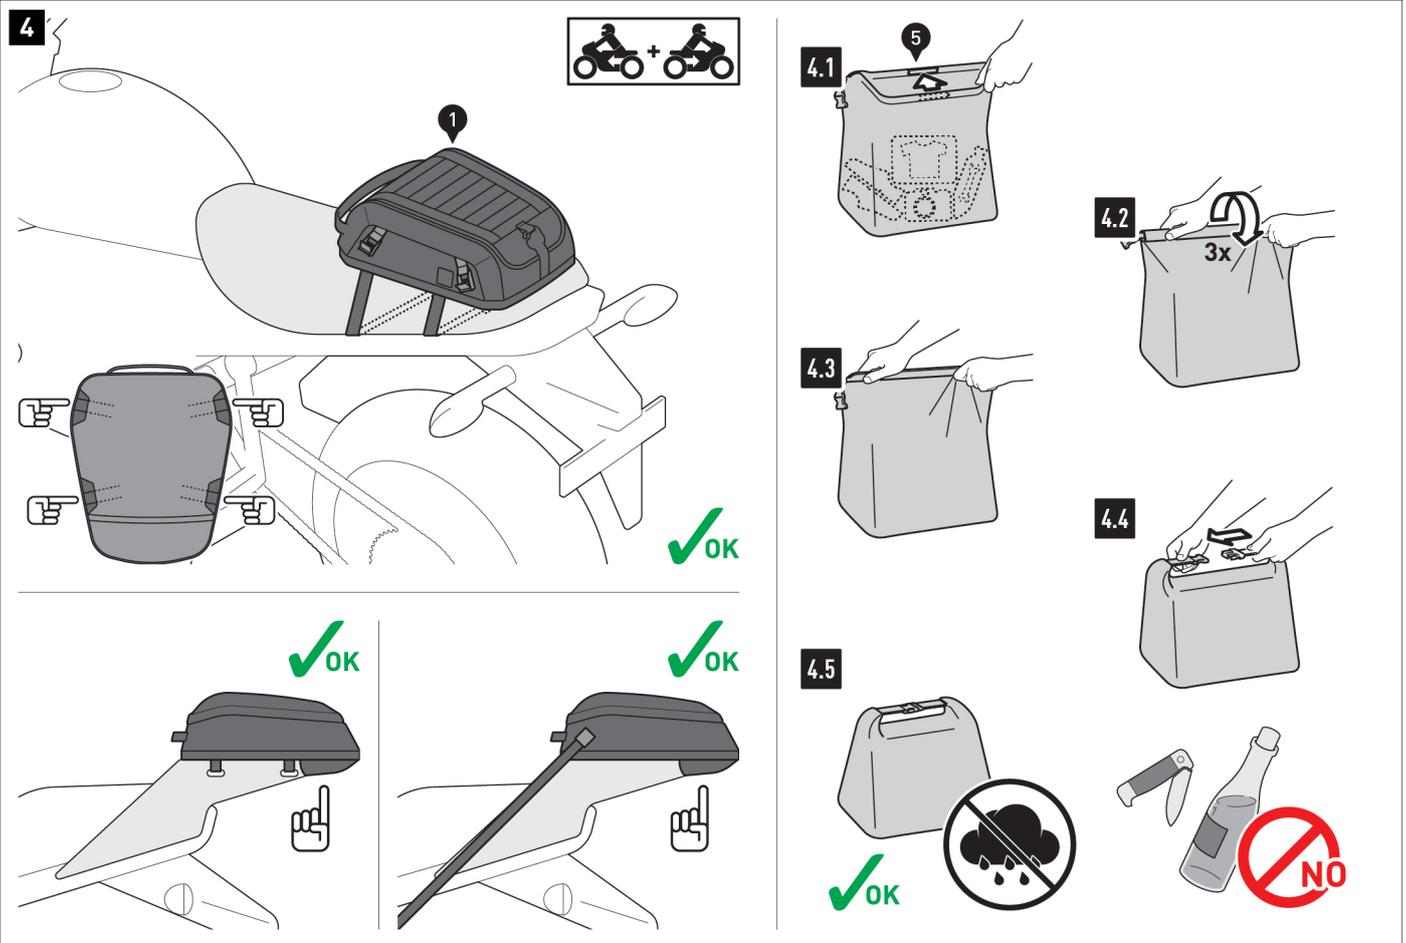

**Alternatively,** the tail bag (1) can also be attached to flat vehicle parts (e.g. seat, rack, etc.) using the **four** Velcro strips located in the double floor. To do so, attach the Velcro strips underneath e.g. the seat. Make sure that the tail bag (1) is secured so that it cannot slip while riding.

**⚠ NOTE:** When not in use, store the Velcro strips in the double bottom of the tail bag (1).

For additional support, place the pocket attached to the bottom over the end of e.g. the seat.

**Alternatively,** the tail bag (1) can also be secured using the pocket attached to the underside and fastened to the vehicle with two loop straps (3) tensioned towards the front.



## LOADING

**⚠ NOTE:** Ensure the load is evenly distributed and secured against slipping while riding.


**⚠ NOTE:** Make sure that you never store sharp-edged, pointed, or similar objects that could cause injury to persons or damage to the vehicle or the tailbag (1).

**⚠ NOTE:** Always use the enclosed waterproof inner bag (5) to protect your luggage from moisture. Attach the waterproof inner bag (5) to the Velcro strips on the inside.

**⚠ NOTE:** Attach only designated SW-MOTECH products to the MOLLE system (loops on the lid of the tail bag (1)).

**⚠ WARNING:** The maximum load is 5 kg (11 lbs).

5

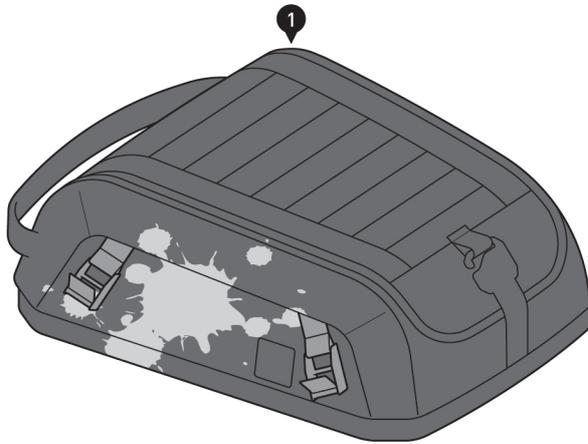

**CARE**

For cleaning, use **ONLY** a soft textile brush, cloth or sponge and warm soapy water! Then rinse with clean water. Do **NOT** use harsh cleaning agents, rough cleaning utensils, or a high-pressure cleaner! After winter rides, be sure to clean the tail bag (1) in order to prevent damage from salt.

**⚠ NOTE:** Surface materials may be subject to colour changes (fading) as a result of prolonged and intense exposure to sunlight and environmental influences (e.g. smog, acid rain). SW-MOTECH assumes no liability for this.

PRODUCT-SPECIFIC NOTES

**⚠ NOTE:** Observe the country-specific regulations for the registration/operation of your vehicle and any applicable TÜV regulations. Have any parts requiring registration entered in the vehicle documents by your inspection centre after they have been installed.

**⚠ DANGER:** Since this is a universal product, please be sure to check that the product can be properly and correctly attached to and used on your vehicle model before using it for the first time! After mounting, check that all vehicle components are unobstructed and can function properly! Lights such as taillights and turn light indicators must not be impeded in their function! Cables, wires, and hoses should not rub and/or squeeze against anything!

**⚠ DANGER:** Carry out a comprehensive check to ensure everything functions properly before departure!

**⚠ DANGER:** Ensure that the product is properly positioned before departure and at every rest stop (every 200 km)!

**⚠ DANGER:** The driving/braking behavior of the motorcycle changes noticeably after mounting this product!

**⚠ DANGER:** Lean angle and ground clearance may be restricted by this product!

**⚠ DANGER:** The maximum vehicle load specified by the vehicle manufacturer remains applicable!

	see LOAD		≤ 130km/h (≤ 80mph)
---	----------	---	---------------------