MOUNTING INSTRUCTIONS • READ AND KEEP MOUNTING INSTRUCTIONS!							
Item number: FSC.05.601.10000	Revision: 00 · Date: 11 - 2024						
Gear lever							
()~ 0.5 h.	DIFFICULT میکر میکر میکر میکر میکر میکر						

ENGLISH -Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 \triangle This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words DANGER, WARNING or CAUTION are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

DANGER: Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

WARNING: Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

A CAUTION: Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

▲ **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

▲ WARNING: Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

▲ WARNING: If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE! **PREPARATION:** Read the mounting instructions carefully and make sure that all parts on the parts list are available.

▲ CAUTION: Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

▲ WARNING: Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

▲ DANGER: Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

▲ WARNING: Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.

\7 *ѕш-тотесн*°

SW-MOTECH GmbH & Co. KG Ernteweg 7-10 35282 Rauschenberg Germany

⊡10R

■ info@sw-motech.com
■ www.sw-motech.com

1

LEGEND OVERVIEW • READ AND KEEP MOUNTING INSTRUCTIONS!



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



Do not use thread lock: Indicates that no liquid thread lock should be used at this point.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop: www.sw-motech.com




Tighten/note the tightening torque information: Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).




Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.

PARTS LIST - READ AND KEEP MOUNTING INSTRUCTIONS!								
1	0	2	3		5	3		
	FSC.05.601.900.01.02	FSC.00.127.700	M6 x 16; DIN 7991 SC.ST.06.016.01.7991.088	M6; DIN 985 MU.ST.06.01.985.08	ктм.54603069100 😙 1 /1	M6 x 16; ISO 7380 SC.ST.06.016.02.7380.109 T/1		
7		8						
	FSC.00.127.011.36	M6 x 25; DIN 912 SC.ST.06.025.01.912.088 T/1	FSC.00.127.022.02					

MOUNTING STEP • READ AND KEEP MOUNTING INSTRUCTIONS!

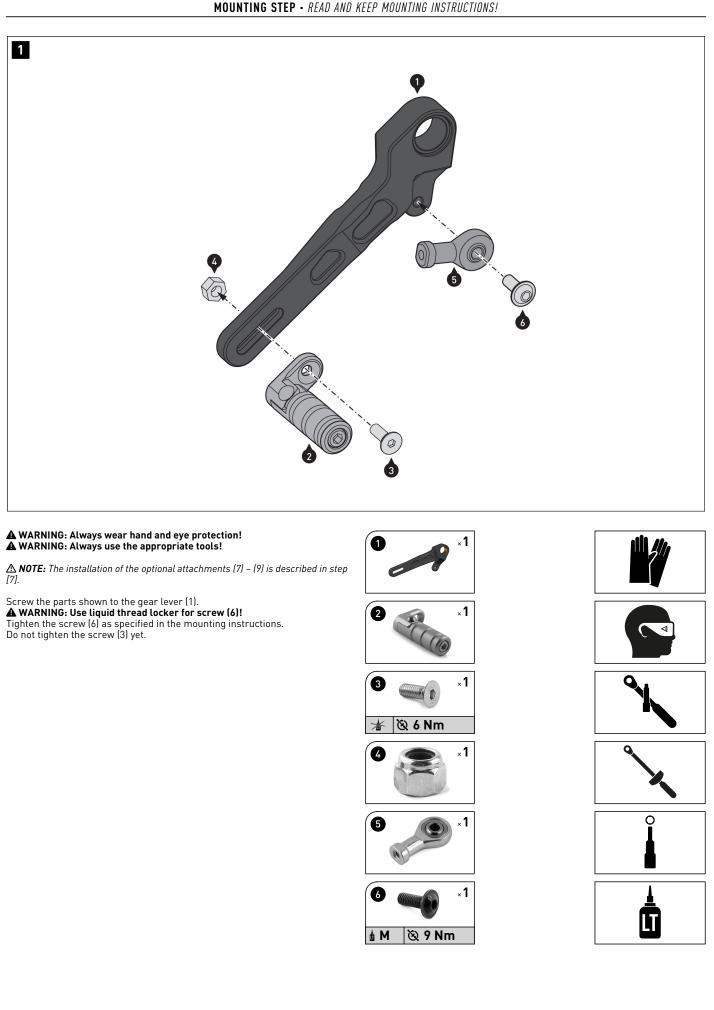

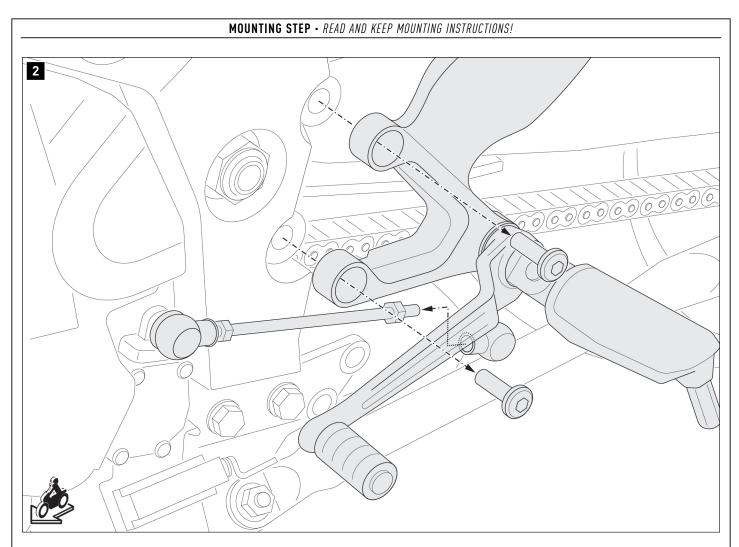


Loosen the screws shown, and remove the left footrest system from the bike.


MOUNTING STEP - READ AND KEEP MOUNTING INSTRUCTIONS!


Remove the original gear lever from the footrest system.

MOUNTING STEP • READ AND KEEP MOUNTING INSTRUCTIONS!

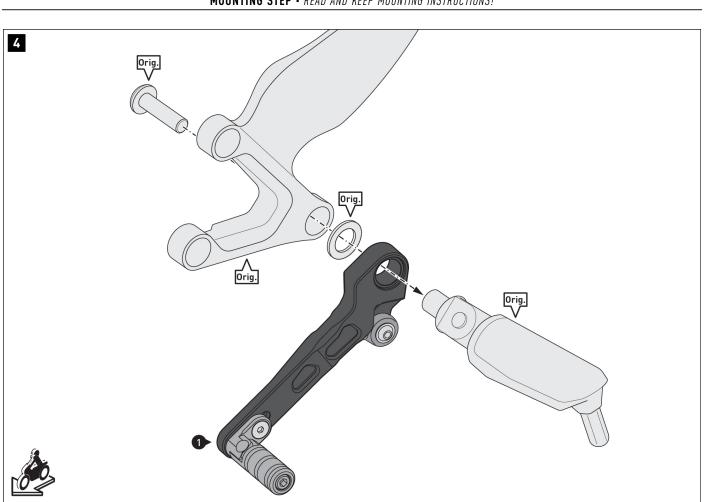


Screw the gear lever (1) onto the footrest system. A WARNING: Use liquid thread locker! Tighten the original screw (Orig.) according to the vehicle manufacturer's specifications.

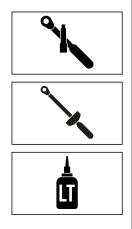


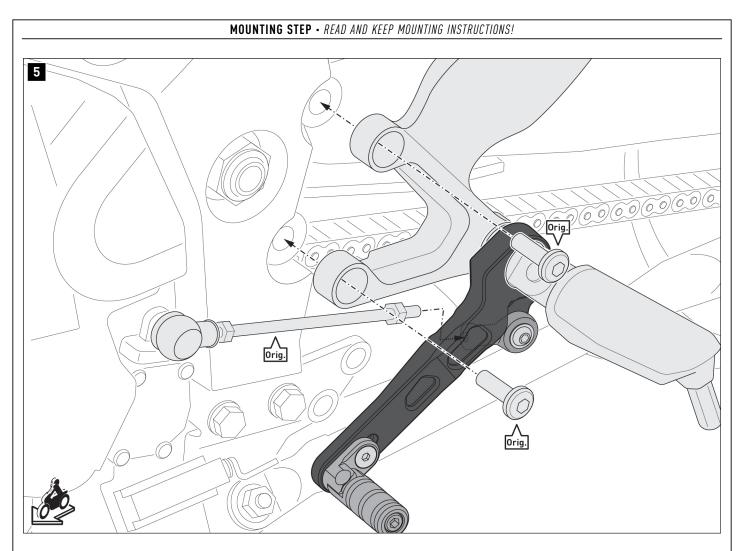


Reinstall the footrest system on the bike. A NOTE: Make sure to install the original threaded rod correctly (left-hand thread on the gear lever and right-hand thread on the bike). A WARNING: Use liquid threadlocker. Tighten the original screws (Orig.) according to the vehicle manufacturer's specifications.






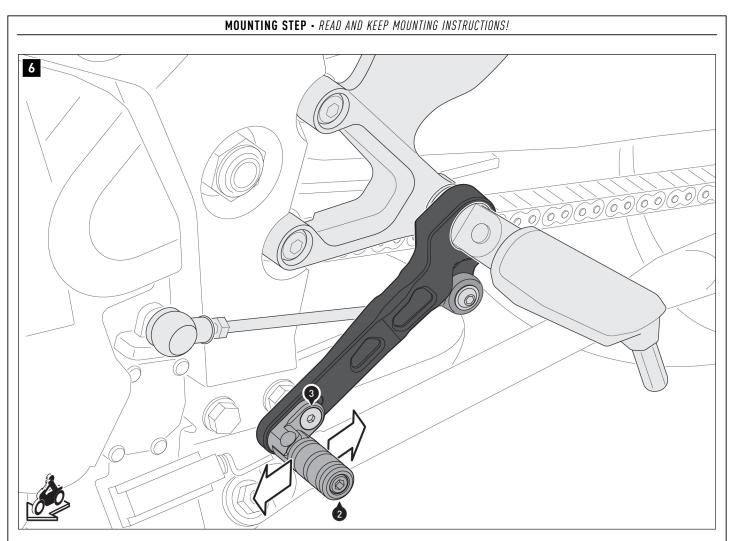

Adjust the tread (2) according to your driving habits. Tighten the screw (3) as specified in the mounting instructions.



MOUNTING STEP • READ AND KEEP MOUNTING INSTRUCTIONS!

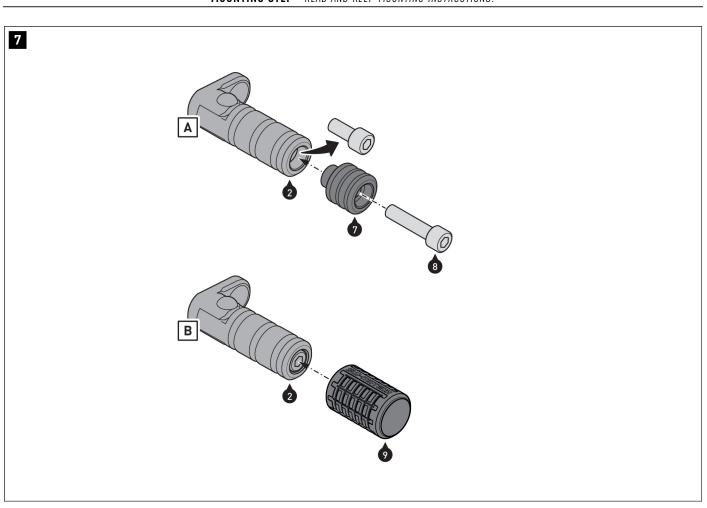

▲ **NOTE:** This step is optional.

Option [A]: Remove the screw pre-installed in the tread (2). Screw the pedal extension (7) to the pedal (2). **A WARNING: Use a liquid threadlocker!** Tighten the screw (8) as specified in the mounting instructions.


Option [B]: Place the rubber sleeve (9) over the pedal (2). Make sure that the inner rings of the rubber sleeve (9) sit in the recesses of the pedal (2).



άM 🕲 6 Nm

Th



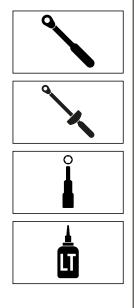

PRODUCT-SPECIFIC NOTES

A WARNING: The cornering and ground clearance may be restricted by this product in the case of extreme inclination!

A WARNING: After installing the gear lever, ensure that all components in the area are not in any way restricted in movement! Shift through all the gears and make sure that the position of the gear lever suits your driver's needs!

NOTE: Observe the country-specific regulations for the registration/operation of your vehicle or any applicable TÜV regulations. Have parts subject to registration entered in the vehicle documents by your inspection authority after installation.