



MOUNT MOTORCYCLE FORK STEM MOUNT PRO

SCAN CODE TO SEE INSTALL VIDEO




PRE-INSTALL CHECK

Measure tube diameter, select and fit the correct spacer before installing the mount.
Expand the spacer to approx hole diameter before installation.

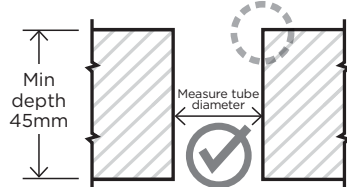
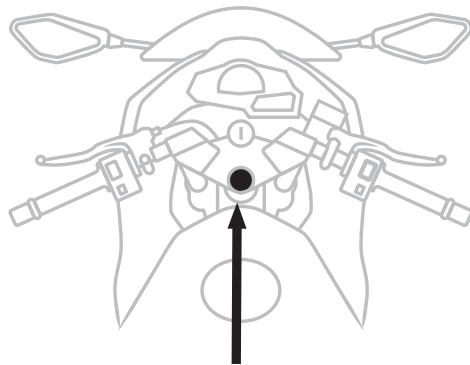


NO LIP IN TUBE
SAFE TO INSTALL

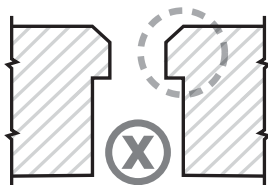


LIP AT TOP OF TUBE
DO NOT INSTALL


INSTALLING THE MOUNT

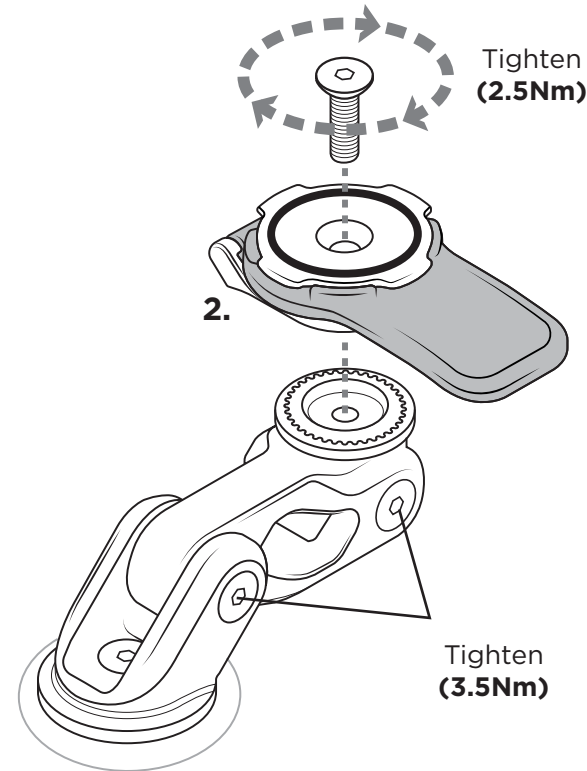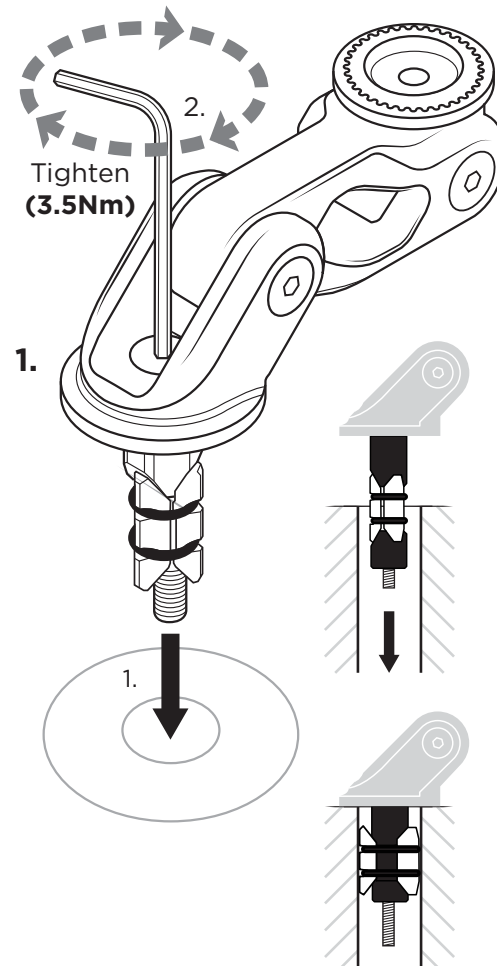


ADJUST YOUR MOUNTING ANGLE

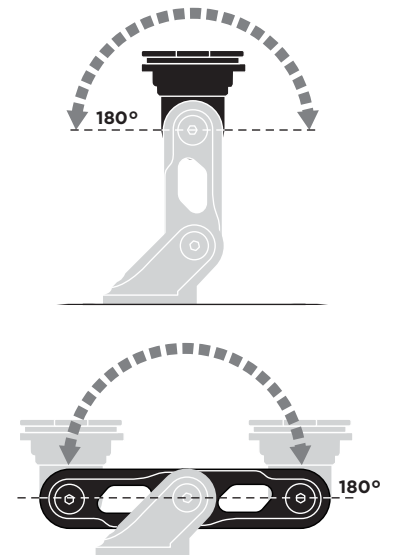

CHANGING THE SPACER (IF NEEDED)

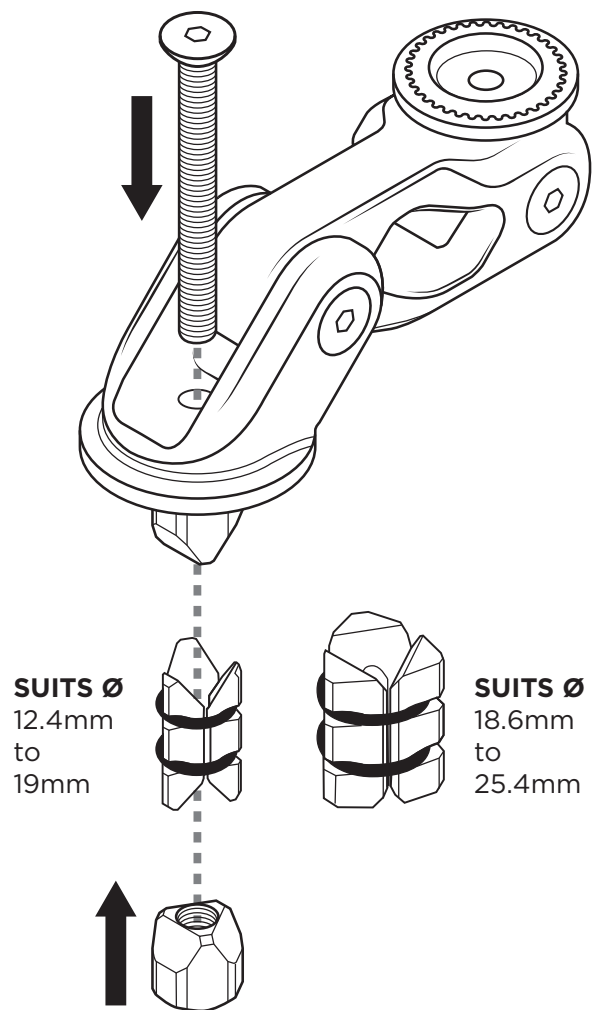

ATTACH YOUR PHONE

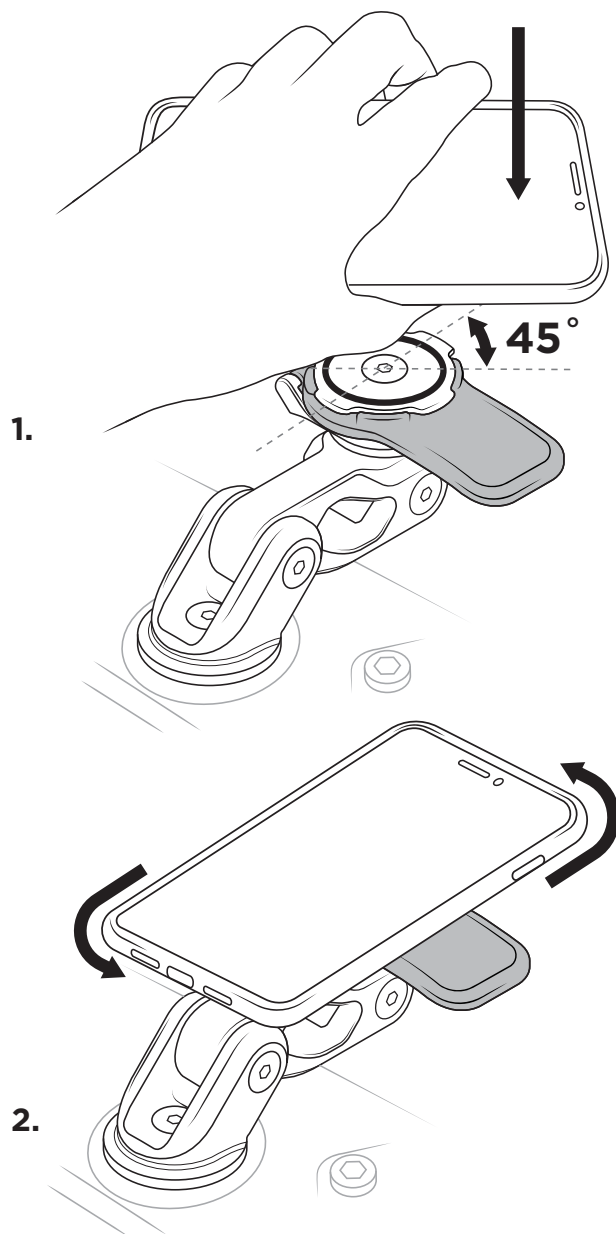

DETACH YOUR PHONE

